



# HR22 Dorada

## Handheld Barcode Scanner

### User Guide

## **Disclaimer**

© 2016 Fujian Newland Auto-ID Tech. Co., Ltd. All rights reserved.

Please read through the manual carefully before using the product and operate it according to the manual. It is advised that you should keep this manual for future reference.

Do not disassemble the device or remove the seal label from the device, doing so will void the product warranty provided by Fujian Newland Auto-ID Tech. Co., Ltd.

All pictures in this manual are for reference only and actual product may differ. Regarding to the product modification and update, Fujian Newland Auto-ID Tech. Co., Ltd. reserves the right to make changes to any software or hardware to improve reliability, function, or design at any time without notice. The information contained herein is subject to change without prior notice.

The products depicted in this manual may include software copyrighted by Fujian Newland Auto-ID Tech. Co., Ltd or third party. The user, corporation or individual, shall not duplicate, in whole or in part, distribute, modify, decompile, disassemble, decode, reverse engineer, rent, transfer or sublicense such software without prior written consent from the copyright holders.

This manual is copyrighted. No part of this publication may be reproduced, distributed or used in any form without written permission from Newland.

Fujian Newland Auto-ID Tech. Co., Ltd. reserves the right to make final interpretation of the statement above.

## Revision History

Version	Description	Date
V1.0.0	Initial release.	April 25, 2016
V1.0.1	Added the <b>Transmit Delay</b> feature for Febraban in Chapter 8.	May 16, 2016
V1.0.2	<ol style="list-style-type: none"> <li>Added the <b>Inquire Product Information</b> feature in Chapter 1.</li> <li>Added the <b>Specify Decoding Area (Top, Bottom, Left, Right)</b> feature in Chapter 4.</li> <li>Added the <b>EAN-13 Beginning with 290 Add-On Code Required, EAN-13 Beginning with 378/379 Add-On Code Required, EAN-13 Beginning with 414/419 Add-On Code Required, EAN-13 Beginning with 434/439 Add-On Code Required, EAN-13 Beginning with 977 Add-On Code Required, EAN-13 Beginning with 978 Add-On Code Required, EAN-13 Beginning with 979 Add-On Code Required</b> features in Chapter 8.</li> <li>Added the <b>EF</b> command (Insert a delay) in Chapter 10.</li> <li>Added <b>Chapter 11 Batch Programming</b>.</li> <li>Removed the “<b>Continue after Good Read</b>” section in Chapter 3.</li> </ol> <p>Note: You must have firmware version V1.00.050 or later to use the new features above.</p>	August 29, 2016
V1.0.3	<ol style="list-style-type: none"> <li>Added the <b>IBM SurePOS (Tabletop)</b> and <b>IBM SurePOS (Handheld)</b> features in Chapter 2.</li> <li>Changed the range of Decode Session Timeout to 100ms - 3,600,000ms and the programming barcodes of the Timeout between Decodes (Same Barcode) for Continuous mode to that of the Timeout between Decodes (Same Barcode) for Sense mode in Chapter 3.</li> <li>Added <b>Code 32 (Italian Pharma Code), Code 32 Prefix, Transmit Code 32 Check Digit</b> and <b>Transmit Code 32 Start/Stop Character</b> features in Chapter 8.</li> <li>Added the <b>BA</b> command (Replace a string with another) in Chapter 10.</li> </ol> <p>Note: You must have firmware version V1.00.081 or later to use the new features above.</p>	November 17, 2016

# Table Of Contents

<b>Revision History .....</b>	<b>-3-</b>
<b>Chapter 1 Getting Started.....</b>	<b>1</b>
Introduction .....	1
About This Guide .....	1
Unpacking .....	1
HR22 Scanner .....	2
Data Port Pinout .....	3
Connecting the Scanner to a Host .....	4
Using USB Cable.....	5
Using RS-232 Cable.....	5
Using PS/2 Cable .....	6
Removing Communication Cable.....	6
Power On, Sleep, Power Off, Reboot.....	7
Maintenance .....	7
Dimensions (unit: mm).....	8
Left View .....	8
Front View.....	8
Top View .....	8
Scanning Instructions .....	9
Barcode Programming.....	10
Factory Defaults.....	11
Custom Defaults .....	11
Inquire Product Information .....	11
<b>Chapter 2 Communication Interfaces .....</b>	<b>12</b>
RS-232 Interface.....	13
Baud Rate .....	14
Parity Check .....	15
Data Bit .....	15
Data Bit & Parity Check .....	16
Stop Bit .....	16
USB Interface .....	17
USB Enumeration.....	17

USB HID-KBW .....	17
Polling Rate .....	18
USB Country Keyboard Types .....	19
Beep on Unknown Character .....	22
Inter-Keystroke Delay .....	22
Convert Case.....	23
Emulate ALT+Keypad .....	24
Function Key Mapping.....	25
Emulate Numeric Keypad.....	26
Code Page.....	26
USB COM Port Emulation .....	27
USB HID-POS .....	27
Introduction.....	27
Access the Scanner with Your Program .....	28
Acquire Scanned Data .....	28
Send Data to the Scanner.....	28
VID/PID.....	29
IBM SurePOS (Tabletop).....	29
IBM SurePOS (Handheld) .....	29
PS/2 Interface .....	30
<b>Chapter 3 Scan Mode.....</b>	<b>31</b>
Batch Mode.....	31
Manual Mode .....	32
Decode Session Timeout .....	32
Level Trigger/Pulse Trigger .....	33
Auto Sleep .....	33
Timeout between Decodes (Same Barcode) .....	34
Sense Mode.....	35
Decode Session Timeout .....	35
Image Stabilization Timeout .....	36
Timeout between Decodes.....	36
Timeout between Decodes (Same Barcode) .....	37
Sensitivity.....	38
Continuous Mode.....	39
Decode Session Timeout .....	39
Timeout between Decodes.....	39
Timeout between Decodes (Same Barcode) .....	40

<b>Chapter 4 Scanning Preferences</b> .....	<b>41</b>
Introduction .....	41
Decode Area.....	41
Whole Area Decoding.....	41
Specific Area Decoding .....	41
Specify Decoding Area.....	42
<b>Chapter 5 Illumination &amp; Aiming</b> .....	<b>44</b>
Illumination.....	44
Aiming.....	45
<b>Chapter 6 Beep &amp; LED Notifications</b> .....	<b>46</b>
Startup Beep.....	46
Good Read Beep for Non-programming Barcode.....	46
Beep Type.....	47
Beep Volume .....	47
Beep on Unknown Character .....	48
Good Read Beep for Programming Barcode .....	48
Good Read LED .....	48
Transmit NGR (Not Good Read) Message .....	49
Edit NGR Message.....	49
<b>Chapter 7 Prefix &amp; Suffix</b> .....	<b>50</b>
Global Settings .....	51
Enable/Disable All Prefixes/Suffixes .....	51
Prefix Sequences.....	51
Custom Prefix .....	52
Enable/Disable Custom Prefix.....	52
Set Custom Prefix.....	52
AIM ID Prefix.....	53
Code ID Prefix .....	53
Restore All Default Code IDs.....	53
Modify Code ID .....	54
Custom Suffix .....	57
Enable/Disable Custom Suffix.....	57
Set Custom Suffix.....	57
Terminating Character Suffix.....	58
Enable/Disable Terminating Character Suffix .....	58
Set Terminating Character Suffix .....	59

<b>Chapter 8 Symbologies .....</b>	<b>60</b>
Global Settings .....	60
Enable/Disable All Symbologies.....	60
Enable/Disable 1D Symbologies .....	60
Enable/Disable 2D Symbologies .....	60
Video Reverse .....	61
1D Symbologies.....	62
Code 128 .....	62
Restore Factory Defaults.....	62
Enable/Disable Code 128.....	62
Set Length Range for Code 128 .....	62
GS1-128 (UCC/EAN-128) .....	63
Restore Factory Defaults.....	63
Enable/Disable GS1-128.....	63
Set Length Range for GS1-128.....	63
AIM-128 .....	64
Restore Factory Defaults.....	64
Enable/Disable AIM-128.....	64
Set Length Range for AIM-128 .....	64
EAN-8 .....	65
Restore Factory Defaults.....	65
Enable/Disable EAN-8.....	65
Transmit Check Digit .....	65
Add-On Code.....	66
Add-On Code Required.....	67
EAN-8 Extension .....	67
EAN-13 .....	68
Restore Factory Defaults.....	68
Enable/Disable EAN-13.....	68
Transmit Check Digit .....	68
Add-On Code.....	69
Add-On Code Required.....	69
EAN-13 Beginning with 290 Add-On Code Required .....	70
EAN-13 Beginning with 378/379 Add-On Code Required .....	70
EAN-13 Beginning with 414/419 Add-On Code Required .....	71
EAN-13 Beginning with 434/439 Add-On Code Required .....	71
EAN-13 Beginning with 977 Add-On Code Required .....	72
EAN-13 Beginning with 978 Add-On Code Required .....	72

EAN-13 Beginning with 979 Add-On Code Required .....	73
ISSN.....	74
Restore Factory Defaults.....	74
Enable/Disable ISSN.....	74
Add-On Code.....	75
Add-On Code Required.....	75
ISBN.....	76
Restore Factory Default .....	76
Enable/Disable ISBN.....	76
Set ISBN Format .....	76
Add-On Code.....	77
Add-On Code Required.....	77
UPC-E.....	78
Restore Factory Defaults.....	78
Enable/Disable UPC-E .....	78
Transmit Check Digit.....	78
Add-On Code.....	79
Add-On Code Required.....	79
Transmit System Character "0" .....	80
UPC-E Extension .....	80
UPC-A.....	81
Restore Factory Defaults.....	81
Enable/Disable UPC-A.....	81
Transmit Check Digit.....	81
Add-On Code.....	82
Add-On Code Required.....	82
Transmit Preamble Character "0".....	83
Interleaved 2 of 5.....	84
Restore Factory Defaults.....	84
Enable/Disable Interleaved 2 of 5.....	84
Set Length Range for Interleaved 2 of 5 .....	84
Check Digit Verification .....	85
Febraban.....	86
Disable/Enable Febraban.....	86
Transmit Delay .....	86
ITF-14 .....	88
ITF-6 .....	89
Matrix 2 of 5 .....	90
Restore Factory Defaults.....	90



Enable/Disable Matrix 2 of 5 .....	90
Set Length Range for Matrix 2 of 5 .....	90
Check Digit Verification .....	91
Industrial 2 of 5 .....	92
Restore Factory Defaults.....	92
Enable/Disable Industrial 2 of 5 .....	92
Set Length Range for Industrial 2 of 5 .....	92
Check Digit Verification .....	93
Standard 2 of 5 (IATA 2 of 5) .....	94
Restore Factory Defaults.....	94
Enable/Disable Standard 25 .....	94
Set Length Range for Standard 25 .....	94
Check Digit Verification .....	95
Code 39 .....	96
Restore Factory Defaults.....	96
Enable/Disable Code 39.....	96
Transmit Start/Stop Character .....	96
Set Length Range for Code 39 .....	97
Check Digit Verification .....	97
Enable/Disable Code 39 Full ASCII .....	97
Enable/Disable Code 32.....	98
Code 32 Prefix.....	98
Transmit Code 32 Check Digit .....	99
Transmit Code 32 Start/Stop Character.....	99
Codabar .....	100
Restore Factory Defaults.....	100
Enable/Disable Codabar .....	100
Set Length Range for Codabar .....	100
Check Digit Verification .....	101
Transmit Start/Stop Character .....	101
Start/Stop Character Format.....	102
Code 93 .....	103
Restore Factory Defaults.....	103
Enable/Disable Code 93.....	103
Set Length Range for Code 93 .....	103
Check Digit Verification .....	104
GS1-Databar (RSS).....	105
Restore Factory Defaults.....	105
Enable/Disable GS1 Databar .....	105

Transmit Application Identifier "01" .....	105
Code 11 .....	106
Restore Factory Defaults.....	106
Enable/Disable Code 11.....	106
Set Length Range for Code 11 .....	106
Transmit Check Digit.....	107
Check Digit Verification .....	107
Plessey .....	108
Restore Factory Defaults.....	108
Enable/Disable Plessey.....	108
Set Length Range for Plessey .....	108
Check Digit Verification .....	109
MSI-Plessey.....	110
Restore Factory Defaults.....	110
Enable/Disable MSI-Plessey.....	110
Set Length Range for MSI-Plessey.....	110
Transmit Check Digit.....	111
Check Digit Verification .....	111
2D Symbolologies.....	112
PDF 417.....	112
Restore Factory Defaults.....	112
Enable/Disable PDF 417 .....	112
Set Length Range for PDF 417.....	112
PDF 417 Twin Code .....	113
Character Encoding.....	113
QR Code.....	114
Restore Factory Defaults.....	114
Enable/Disable QR Code .....	114
Set Length Range for QR Code .....	114
Micro QR .....	114
QR Twin Code.....	115
Character Encoding.....	115
Data Matrix.....	116
Restore Factory Defaults.....	116
Enable/Disable Data Matrix.....	116
Set Length Range for Data Matrix.....	116
Rectangular Barcode.....	117
Mirror Image .....	117
Data Matrix Twin Code.....	118

Character Encoding.....	118
Chinese Sensible Code .....	119
Restore Factory Defaults.....	119
Enable/Disable Chinese Sensible Code .....	119
Set Length Range for Chinese Sensible Code .....	119
<b>Chapter 9 Image Control .....</b>	<b>120</b>
Image Flipping .....	120
Flip .....	121
Flip Vertically .....	121
Flip Horizontally .....	121
<b>Chapter 10 Data Formatter .....</b>	<b>122</b>
Introduction .....	122
Add a Data Format .....	122
Programming with Barcodes .....	123
Programming with a Batch Command.....	125
Enable Data Format .....	126
Change Data Format for a Single Scan .....	126
Enable/Disable Data Formatter .....	127
Non-Match Error Beep.....	128
Clear Data Format .....	128
Query Data Formats .....	129
Formatter Command Type 6 .....	130
Send Commands .....	130
Move Commands.....	133
Search Commands.....	135
Miscellaneous Commands .....	138
<b>Chapter 11 Batch Programming .....</b>	<b>143</b>
Introduction .....	143
Create a Batch Command .....	144
Create a Batch Barcode .....	145
Use Batch Barcode.....	146
<b>Chapter 12 Troubleshooting .....</b>	<b>147</b>
FAQ.....	147
<b>Appendix .....</b>	<b>149</b>
Appendix 1: Factory Defaults Table .....	149

Appendix 2: AIM ID Table.....	158
Appendix 3: Code ID Table .....	160
Appendix 4: ASCII Table .....	161
Appendix 5: Parameter Programming Examples.....	165
a. Program the Decode Session Timeout .....	165
b. Program the Time Period from Idle to Sleep.....	165
c. Program the Image Stabilization Timeout .....	165
d. Program the Timeout between Decodes (Same Barcode) .....	166
e. Program the Threshold Value of Illumination Change .....	166
f. Program the Timeout between Decodes.....	166
g. Program the Decoding Area.....	167
h. Program the Custom Prefix/Suffix.....	167
i. Program the Terminating Character Suffix.....	168
j. Program the Code ID.....	169
k. Program the NGR Message .....	169
l. Program the Code Page .....	169
m. Program the Length Range (Maximum/Minimum Lengths) for a Symbology.....	170
n. Program the Custom Inter-keystroke Delay .....	170
o. Program the scanner to get proper output for Russian encoded with Windows 1251 .....	171
p. Program the scanner to get proper output for Russian encoded with UTF-8.....	171
q. Program the Custom Transmit Delay per Character for Febraban.....	172
r. Program the Custom Transmit Delay per 12 Characters for Febraban.....	172
Appendix 6: Digit Barcodes .....	173
Appendix 7: Save/Cancel Barcodes.....	175
Appendix 8: ASCII Function Key Mapping Table.....	176
Appendix 9: Code Pages List .....	178
Appendix 10: Symbology ID Number .....	179



0006010  
Enter Setup

## Chapter 1 Getting Started

### Introduction

The HR22 hand-held barcode scanner (hereinafter referred to as “**HR22 scanner**” or “**the scanner**”), armed with the world-leading Newland patented **UIMG**<sup>®</sup>, a computerized image recognition system-on-chip, bring about a new era of 2D barcode scanner.

The HR22’s 2D barcode decoder chip ingeniously blends **UIMG**<sup>®</sup> technology and advanced chip design & manufacturing, which significantly simplifies application design and delivers superior performance and solid reliability with low power consumption.

The HR22 supports all mainstream 1D and standard 2D barcode symbologies (e.g., PDF417, QR Code M1/M2/Micro and Data Matrix) as well as GS1-DataBar<sup>™</sup>(RSS) (Limited/Stacked/Expanded versions). It can read barcodes on virtually any medium - paper, plastic card, mobile phones and LCD displays.

### About This Guide

This guide provides programming instructions for the HR22. Users can configure the HR22 by scanning the programming barcodes included in this manual.

The HR22 has been properly configured for most applications and can be put into use without further configuration. Users may check the **Factory Defaults Table** in **Appendix** for reference. Throughout the manual, asterisks (\*\*) indicate factory default values.

### Unpacking

Open the package and take out the scanner and its accessories. Check to make sure everything on the packing list is present and intact. If any contents are damaged or missing, please keep the original package and contact your dealer immediately for after-sales service.




0006000  
\*\* Exit Setup



0006010  
Enter Setup

---

## HR22 Scanner

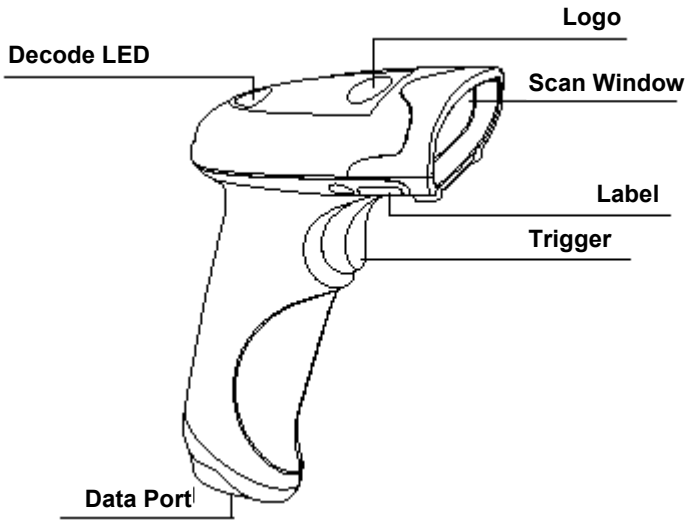

### Decode LED:

Green: Barcode is decoded successfully.




0006000  
\*\* Exit Setup



0006010

Enter Setup

## Data Port Pinout

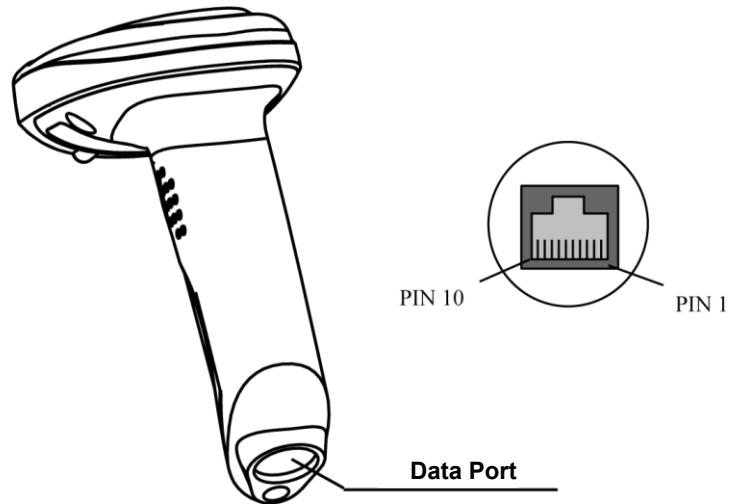

PIN	Signal	Type	Function
1	KB_CLK	I/O	Keyboard clock signal (PS/2)
2	KB_DATA	I/O	Keyboard data signal (PS/2)
3	VCC	P	Power+ (DC5V)
4	TXD	O	RS-232 output
5	RXD	I	RS-232 input
6	PC_CLK / CTS	I/O	PC clock signal (PS/2) / Clear to send (RS-232)
7	PC_DATA / RTS	I/O	PC data signal (PS/2) / Request to send (RS-232)
8	GND	P	Ground
9	D-	I/O	USB signal
10	D+	I/O	



0006000

\*\* Exit Setup



0006010  
Enter Setup


---

## Connecting the Scanner to a Host

The scanner must be connected to a Host in actual application, such as PC, POS or any intelligent terminal with USB or RS-232 port or PS/2 interface, using a communication cable (USB or RS-232 or PS/2 cable).

### USB

USB port on the Host



### RS-232

RS-232 port on the Host



### PS/2

PS/2 port on the Host



**Note:** Please check the port on the host and purchase the cable accordingly.



0006000  
\*\* Exit Setup






0006010

Enter Setup

---


## Using USB Cable

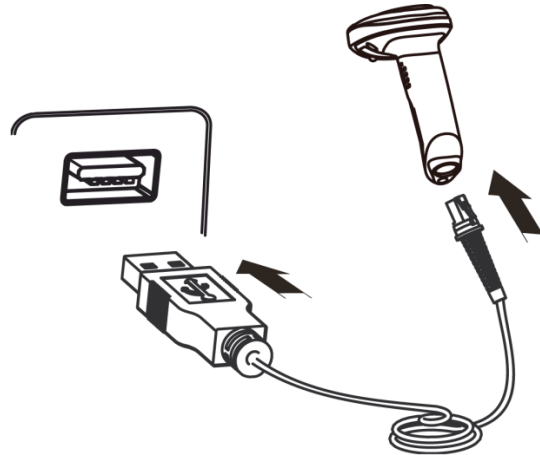

Connect the scanner to a Host through a USB cable with RJ45 and USB connectors:

1. Plug the RJ45 connector into the data port on the scanner.
2. Plug the USB connector into the USB port on the Host.

## Using RS-232 Cable

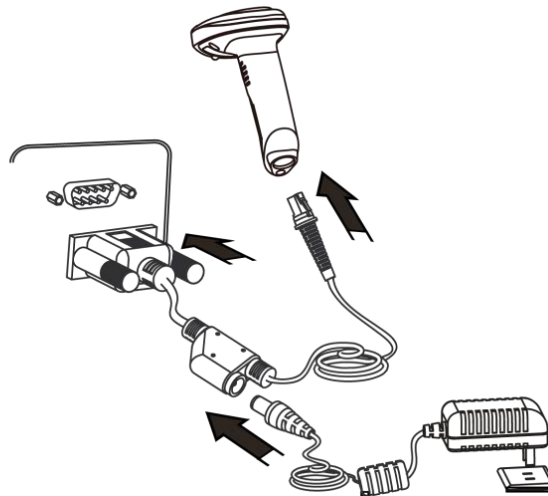

Connect the scanner to a Host through an RS-232 cable with RJ45, RS-232 and power connectors:

1. Plug the RJ45 connector into the data port on the scanner.
2. Plug the RS-232 connector into the RS-232 port on the Host.
3. Connect the supplied power adaptor to the power connector of the RS-232 cable.



0006000


\*\* Exit Setup



0006010  
Enter Setup

---


## Using PS/2 Cable

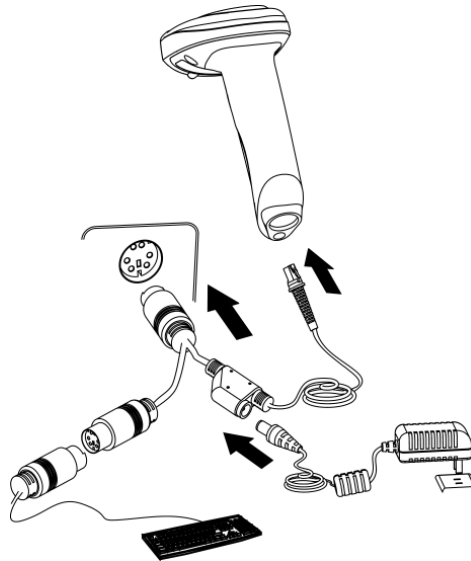

Connect the scanner to a Host through a PS/2 cable with RJ45 and PS/2 connectors and a power jack:

1. Plug the RJ45 connector into the data slot on the scanner.
2. Plug the PS/2 connector into the PS/2 port on the Host.
3. When required, plug the power adaptor into the power jack on the PS/2 cable.
4. When required, connect the PS/2 cable to a keyboard via its PS/2 port.

## Removing Communication Cable

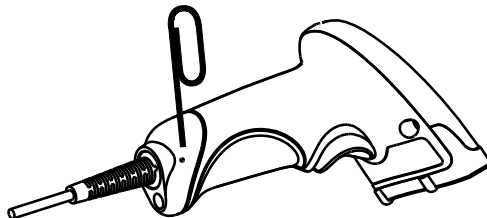

Get an appropriate needle or a straightened paper clip and then follow the steps below:

1. Disconnect the power adaptor from mains if there is one.
  2. Insert the needle into the hole.
  3. Pull out the cable slowly from the scanner while pressing the needle in.
  4. Remove the needle.
  5. Disconnect the cable from the Host.
- 



0006000  
\*\* Exit Setup



0006010

Enter Setup

---

## Power On, Sleep, Power Off, Reboot

### Power on the scanner

Connect the scanner to a Host. Then the scanner will be turned on and automatically enter the sleep mode.

### Enter the sleep mode

If no operation is performed on the device for some time, the device will automatically enter the sleep state.

### Power off the scanner

Remove the communication cable from the scanner; or remove the communication cable from the Host; or disconnect the power adaptor from mains.

### Reboot the scanner

If the scanner stops responding to input or runs abnormally, turn off the scanner and then turn it back on.

## Maintenance

- ✧ The scan window should be kept clean.
- ✧ Do not scratch the scan window.
- ✧ Use soft brush to remove the stain from the scan window.
- ✧ Use the soft cloth to clean the window, such as eyeglass cleaning cloth.
- ✧ Do not spray any liquid on the scan window.
- ✧ Do not use any detergent to clean other parts of the device except for water.

**Note: The warranty DOES NOT cover damages caused by inappropriate care and maintenance.**



0006000

\*\* Exit Setup




0006010

Enter Setup


---

## Dimensions (unit: mm)


### Left View

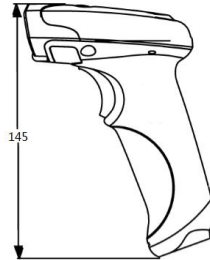

### Front View

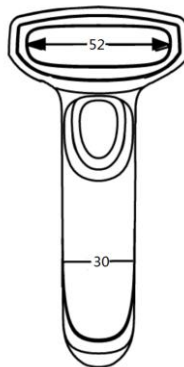

### Top View

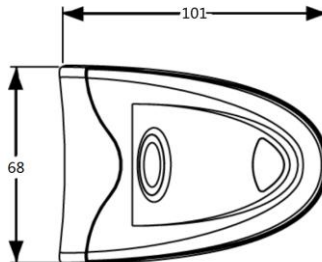

0006000

\*\* Exit Setup



0006010

Enter Setup


---

## Scanning Instructions

When the scanner is in the Manual scan mode, you can follow the steps below to scan a barcode:

1. Press and hold the Trigger. Then the scanner will project a red aiming beam.
2. Aim the red beam across the center of barcode, as shown below.
3. Release the Trigger when the red beam goes off. If the barcode is decoded successfully, the scanner will emit a good read beep and the decoded data will be sent to the Host.

**Note:** For barcodes of the same batch, the scanner keeps a very high success ratio in certain distance which is regarded as the optimal scanning distance.

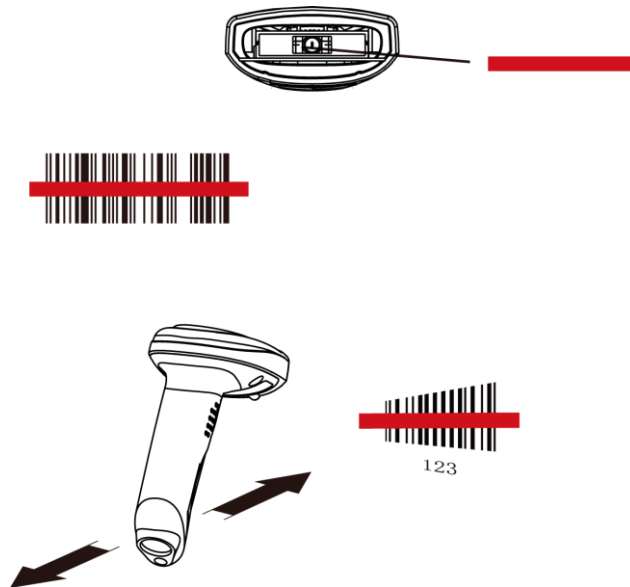

0006000

\*\* Exit Setup



0006010

**Enter Setup**

---

## Barcode Programming

Scanning the **Enter Setup** barcode can enable the scanner to enter the setup mode. Then you can scan a number of programming barcodes to configure your scanner. To exit the setup mode, scan the **Exit Setup** barcode.

If the scanner has exited the setup mode, only some special programming barcodes, such as the **Enter Setup** barcode and **Restore All Factory Defaults** barcode, can be read.



0006010

**Enter Setup**



0006000

**\*\* Exit Setup**

Programming barcode data can be transmitted to the Host. Scan the appropriate barcode below to enable or disable the transmission of programming barcode data (i.e. the characters under programming barcode) to the Host.

Restarting the scanner will automatically disable the transmission of programming barcode data to the Host.



0002010

**Transmit Programming Barcode Data**



0002000

**\*\* Do Not Transmit Programming Barcode Data**



0006000

**\*\* Exit Setup**



0006010

Enter Setup

---

## Factory Defaults

Scanning the following barcode can restore the scanner to the factory defaults. See **Appendix 1: Factory Defaults Table** for more information.

**Note:** Use this feature with discretion.



0001000

Restore All Factory Defaults

## Custom Defaults

Custom defaults make it possible to save the frequently-used settings on the scanner.

Scanning the **Save as Custom Defaults** barcode can save the current settings as custom defaults. Once custom default settings are stored, they can be recovered at any time by scanning the **Restore All Custom Defaults** barcode.

Custom defaults are stored in the non-volatile memory. Restoring the scanner to the factory defaults will not remove the custom defaults from the scanner.



0001150

Save as Custom Defaults



0001160

Restore All Custom Defaults

## Inquire Product Information

You can scan the barcode below to inquire the scanner information (such as firmware version, model number, serial number, manufacture date). The result will be sent to the Host.



9876537

Inquire Product Information

---



0006000

\*\* Exit Setup



0006010

**Enter Setup**

## Chapter 2 Communication Interfaces

The scanner provides a TTL-232 interface, a USB interface and a PS/2 interface to communicate with the host device. The host device can receive scanned data and send commands to control the scanner or to access/alter the configuration information of the scanner via the interface.



0006000

**\*\* Exit Setup**





0006010  
Enter Setup

---

## RS-232 Interface

When the scanner is connected to the RS-232 port of a Host, scan the **RS-232** barcode below to enable the interface. Moreover, you need to set communication parameters (including baud rate, parity check, data bit and stop bit) to match the host device.



1100000

**RS-232**

Default serial communication parameters are listed below. Make sure all parameters match the host requirements.

Parameter	Factory Default
Baud Rate	9600
Parity Check	None
Data Bits	8
Stop Bits	1
Hardware Flow Control	None



0006000  
**\*\* Exit Setup**



0006010

**Enter Setup**

---

## Baud Rate

Baud rate is the number of bits of data transmitted per second. Set the baud rate to match the Host requirements.



0100030

**\*\* 9600**



0100000

**1200**



0100050

**19200**



0100010

**2400**



0100060

**38400**



0100020

**4800**



0100070

**57600**



0100040

**14400**



0100080

**115200**



0006000

**\*\* Exit Setup**



0006010

Enter Setup

---

## Parity Check

When the number of data bits is set to 7, you can only select either **Even Parity** or **Odd Parity**. The **None** option will be regarded as **Even Parity** in this case.



0101000

**\*\* None**



0101010

**Even Parity**



0101020

**Odd Parity**

## Data Bit

When the number of data bits is set to 7, you can only select either **Even Parity** or **Odd Parity**.



0103020

**7 Data Bits**



0103030

**\*\* 8 Data Bits**



0006000

**\*\* Exit Setup**



0006010

Enter Setup

### Data Bit & Parity Check



0105010

7 Data Bits/Even Parity



0105020

7 Data Bits/Odd Parity



0105030

\*\* 8 Data Bits/ No Parity



0105040

8 Data Bits/Even Parity



0105050

8 Data Bits/Odd Parity

### Stop Bit



0102000

\*\* 1 Stop Bit



0102010

2 Stop Bits



0006000

\*\* Exit Setup



0006010  
Enter Setup

---

## USB Interface

### USB Enumeration

If the scanner is connected to the host device via a USB connection, the scanner will be enumerated using S/N or “00000000” after power-up. **Enumeration using S/N** enables the host device to distinguish even between scanners of same model. **Enumeration using “00000000”** disables the host device from distinguishing between scanners of same model.

Driver installation is required for each USB device distinguished from others by the host device in the process of enumeration.



**Enumeration Using S/N**



**\*\* Enumeration Using “00000000”**

### USB HID-KBW

When you connect the scanner to the host device via a USB connection, you can enable the **USB HID-KBW** feature by scanning the barcode below. Then scanner’s transmission will be simulated as USB keyboard input. The host device receives keystrokes on the virtual keyboard. It works on a Plug and Play basis and no driver is required.



**\*\* USB HID-KBW**



0006000  
**\*\* Exit Setup**



0006010

**Enter Setup**

---

## Polling Rate

This parameter specifies the polling rate for a USB keyboard. If the Host drops characters, change the polling rate to a bigger value.



1103170

**\*\* 1ms**



1103171

**2ms**



1103172

**3ms**



1103173

**4ms**



1103174

**5ms**



1103175

**6ms**



1103176

**7ms**



1103177

**8ms**



1103178

**9ms**



1103179

**10ms**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

---

## USB Country Keyboard Types

Keyboard layouts vary from country to country. The default setting is U.S. keyboard.



1103201

**\*\* U.S.**



1103202

**Belgium**



1103203

**Brazil**



1103204

**Canada**



1103205

**Czechoslovakia**



1103206

**Denmark**



1103207

**Finland**



1103208

**France**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

---



1103209

**Germany, Austria**



1103210

**Greece**



1103211

**Hungary**



1103212

**Israel**



1103213

**Italy**



1103214

**Latin America, South America**




1103215

**Netherlands**



1103216

**Norway**



1103217

**Poland**



1103218

**Portugal**



0006000

**\*\* Exit Setup**





0006010

Enter Setup

---



1103219

Romania



1103220

Russia



1103221

Slovakia



1103222

Spain



1103223

Sweden



1103224

Switzerland



1103225

Turkey\_F




1103226

Turkey\_Q



1103227

UK



1103228

Japan

**Note:** To program the scanner to get proper output for Russian encoded with Windows 1251 or UTF-8 (PDF417/QR Code/Data Matrix), see **Appendix 5**.

---



0006000

\*\* Exit Setup



0006010

**Enter Setup**

---

### **Beep on Unknown Character**

Due to the differences in keyboard layouts, some characters contained in barcode data may be unavailable on the selected keyboard. As a result, the scanner fails to transmit the unknown characters.

Scan the appropriate barcode below to enable or disable the emission of beep when an unknown character is detected.



1103031

**Beep on Unknown Character**



1103030

**\*\* Do Not Beep on Unknown Character**

### **Inter-Keystroke Delay**

This parameter specifies the delay between emulated keystrokes. It is programmable in 5ms increments from 0ms to 75ms. Single-digit values must have a leading zero. To learn how to set custom delay, see **Appendix 5**.



1103050

**\*\* No Delay**



1103051

**Short Delay (20ms)**



1103052

**Long Delay (40ms)**



1103053

**Custom Delay**



0006000

**\*\* Exit Setup**



0006010

Enter Setup

---

## Convert Case

Scan the appropriate barcode below to convert barcode data to your desired case.



1103040

**\*\* No Case Conversion**



1103043

**Invert Upper and Lower Case Characters**



1103041

**Convert All to Upper Case**



1103042

**Convert All to Lower Case**

**Example:** When the **Invert Upper and Lower Case Characters** feature is enabled, barcode data “AbC” is transmitted as “aBc”.



0006000

**\*\* Exit Setup**



0006010

Enter Setup

### Emulate ALT+Keypad

This feature allows any ASCII character (0x00 - 0xFF) to be sent over the numeric keypad no matter which keyboard type is selected. Since sending a character involves multiple keystroke emulations, this method appears less efficient.

The following options are available:

- **Disable:** No ASCII character is sent in the ALT+Keypad way.
- **Mode 1:** ASCII characters not supported by the selected keyboard type but falling into 0x20~0xFF are sent in the ALT+Keypad way.
- **Mode 2:** ASCII characters falling into 0x20~0xFF are sent in the ALT+Keypad way.
- **Mode 3:** ASCII characters falling into 0x00~0xFF are sent in the ALT+Keypad way.

**Note:** In the event of a conflict between **Function Key Mapping** and **Mode 3, Function Key Mapping** shall govern.



1103060

**\*\* Disable**



1103061

**Mode 1**



1103062

**Mode 2**



1103063

**Mode 3**

**Example:** Supposing US keyboard is selected, barcode data "ADF" (65/208/70) is sent as below:

(1) **Mode 1** is enabled:

"A" -- Keystroke "A"

"D" -- "ALT Make" + "208" + "ALT Break"

"F" -- Keystroke "F"

(2) **Mode 3** is enabled:

"A" -- "ALT Make" + "065" + "ALT Break"

"D" -- "ALT Make" + "208" + "ALT Break"

"F" -- "ALT Make" + "070" + "ALT Break"



0006000

**\*\* Exit Setup**



0006010  
Enter Setup

### Function Key Mapping

When Function Key Mapping is enabled, function characters (0x00 - 0x1F) are sent as ASCII sequences over the keypad. For more information, see **Appendix 8: ASCII Function Key Mapping Table**.



1103140


**Enable Function Key Mapping**



1103130

**\*\* Disable Function Key Mapping**

**Example:** Barcode data 0x16

 T	Enable Function Key Mapping	Ctrl+V
	Disable Function Key Mapping	F1



0006000  
**\*\* Exit Setup**



0006010

**Enter Setup**

---

### **Emulate Numeric Keypad**

When this feature is disabled, sending barcode data is emulated as keystroke(s) on main keyboard.

To enable this feature, scan the **Emulate Numeric Keypad** barcode. Sending a number (0-9) is emulated as keystroke(s) on numeric keypad, whereas sending other characters like “+”, “\_”, “\*”, “/” and “.” is still emulated as keystrokes on main keyboard.



1103110

**\*\* Do Not Emulate Numeric Keypad**



1103120

**Emulate Numeric Keypad**

### **Code Page**

The **Code Page** programming feature is provided to support more international characters. This feature is only effective when ASCII characters are sent in the ALT+Keypad way. Programming a code page requires scanning numeric barcode (For more information, see **Appendix 9: Code Pages List**). The default code page is Windows 1252 (Latin I). To learn how to program it, see **Appendix 5**.



1103180

**Set the Code Page**



0006000

**\*\* Exit Setup**



0006010

Enter Setup

---

## USB COM Port Emulation

If you connect the scanner to the host device via a USB connection, the **USB COM Port Emulation** feature allows the Host to receive data in the way as a serial port does. A driver is required for this feature.



1100060

USB COM Port Emulation

## USB HID-POS

### Introduction

The USB HID-POS interface is recommended for new application programs. It can send up to 56 characters in a single USB report and appears more efficient than keyboard emulation.

Features:

- ✧ HID based, no custom driver required.
- ✧ Way more efficient in communication than keyboard emulation and traditional RS-232 interface.

**Note:** USB HID-POS does not require a custom driver. However, a HID interface on Windows 98 does. All HID interfaces employ standard driver provided by the operating system. Use defaults when installing the driver.



1100080

USB HID-POS



0006000

\*\* Exit Setup



0006010

Enter Setup

### Access the Scanner with Your Program

Use CreateFile to access the scanner as a HID device and then use ReadFile to deliver the scanned data to the application program. Use WriteFile to send data to the scanner.

For detailed information about USB and HID interfaces, go to [www.USB.org](http://www.USB.org).

### Acquire Scanned Data

After scanning and decoding a barcode, the scanner sends the following input report:

	Bit							
Byte	7	6	5	4	3	2	1	0
0	Report ID = 0x02							
1	Length of the barcode							
2-57	Decoded data (1-56)							
58-60	AIM ID							
61-62	Reserved							
63	-	-	-	-	-	-	-	Decoded Data Continued

### Send Data to the Scanner

This output report is used to send data to the device. All programming commands can be used.

	Bit							
Byte	7	6	5	4	3	2	1	0
0	Report ID = 0x04							
1	Length of the output data							
2-63	Output data (1-62)							



0006000

\*\* Exit Setup





0006010

Enter Setup

## VID/PID

USB uses VID (Vendor ID) and PID (Product ID) to identify and locate a device. The VID is assigned by USB Implementers Forum. Newland's vendor ID is 1EAB (Hex). A PID is assigned to each interface.

Product	Interface	PID (Hex)	PID (Dec)
HR22	USB HID-KBW	1A03	6659
	USB COM Port Emulation	1A06	6662
	USB HID-POS	1A10	6672
	IBM SurePOS	1A20	6688

## IBM SurePOS (Tabletop)



1100090

IBM SurePOS (Tabletop)

## IBM SurePOS (Handheld)



1100100

IBM SurePOS (Handheld)



0006000

\*\* Exit Setup



0006010

**Enter Setup**

---

## PS/2 Interface

When the scanner is connected to the PS/2 port of a host device, scan the **PS/2** barcode below to enable the interface. If there is no external keyboard connected, the **External Keyboard Not Connected** option should be selected.



1100070

**PS/2**



1106010

**External Keyboard Not Connected**



1106011

**\*\* External Keyboard Connected**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

## Chapter 3 Scan Mode

### Batch Mode

A trigger pull activates a round of multiple decode sessions. This round of multiple scans continues until you release the trigger. Rereading the same barcode is not allowed in the same round.



0302003

**Batch Mode**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

---

## Manual Mode

A trigger pull activates a decode session. The decode session continues until the barcode is decoded or you release the trigger or decode session timeout expires.



0302000

**\*\* Manual Mode**

## Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 1ms increments from 100ms to 3,600,000ms. The default setting is 3,000ms. To learn how to program this parameter, see **Appendix 5**.



0313000

**Decode Session Timeout**



0006000

**\*\* Exit Setup**



0006010

Enter Setup

---

## Level Trigger/Pulse Trigger

**Level Trigger:** During a scan attempt, the decode session ends once the Trigger is released.

**Pulse Trigger:** During a scan attempt, the release of the Trigger does not affect the decode session.



0313090

**\*\* Level Trigger**



0313091

**Pulse Trigger**

## Auto Sleep

Auto Sleep allows the scanner in the Manual Mode to automatically enter the sleep or low power mode if no operation or communication is performed for a time period (user programmable). When the scanner is in the sleep mode, pressing the Trigger or receiving command from the host device can awake the scanner. The scanner returns to full operation within 100ms.



0313060

**Enable Auto Sleep**



0313070

**\*\* Disable Auto Sleep**

The parameter below specifies how long the scanner remains idle (no operation or communication occurs) before it is put into sleep mode. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 500ms. To learn how to program this parameter, see **Appendix 5**.



0313050

**Time Period from Idle to Sleep**

---



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

---

### **Timeout between Decodes (Same Barcode)**

Timeout between Decodes (Same Barcode) can avoid undesired rereading of same barcode in a given period of time.

To enable/disable the Timeout between Decodes (Same Barcode), scan the appropriate barcode below.

**Enable Timeout between Decodes:** Do not allow the scanner to re-read same barcode before the timeout between decodes (same barcode) expires.

**Disable Timeout between Decodes:** Allow the scanner to re-read same barcode.



0313161

**\*\* Disable Timeout between Decodes**



0313171

**Enable Timeout between Decodes**

The following parameter sets the timeout between decodes for same barcode. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,500ms.

To learn how to program this parameter, see **Appendix 5**.



0313010

**Timeout between Decodes (Same Barcode)**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

---

## Sense Mode

The scanner waits for the image stabilization timeout to expire before activating a decode session every time it detects a change in ambient illumination. Decode session continues until the barcode is decoded or the decode session timeout expires.

In the Sense mode, a trigger pull can also activate a decode session. The decode session continues until the barcode is decoded or the trigger is released. When the session ends, the scanner continues to monitor ambient illumination.



0302010

**Sense Mode**

## Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 100ms increments from 100ms to 3,600,000ms. The default setting is 3,000ms. To learn how to program this parameter, see **Appendix 5**.



0313000

**Decode Session Timeout**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

---

## Image Stabilization Timeout

After the scanner detects a change in ambient illumination, it waits for the image stabilization timeout to expire before activating a decode session. The image stabilization timeout is programmable in 1ms increments from 0ms to 1,600ms. The default setting is 500ms. To learn how to program this parameter, see **Appendix 5**.



0313120

**Image Stabilization Timeout**

## Timeout between Decodes

This parameter sets the timeout between decode sessions. When a decode session ends, next session will not happen until the timeout between decodes expires. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,000ms. To learn how to program this parameter, see **Appendix 5**.



0313040

**Timeout between Decodes**



0006000

**\*\* Exit Setup**





0006010

Enter Setup

---

## Timeout between Decodes (Same Barcode)

Timeout between Decodes (Same Barcode) can avoid undesired rereading of same barcode in a given period of time.

To enable/disable the Timeout between Decodes (Same Barcode), scan the appropriate barcode below.

**Enable Timeout between Decodes:** Do not allow the scanner to re-read same barcode before the timeout between decodes (same barcode) expires.

**Disable Timeout between Decodes:** Allow the scanner to re-read same barcode.



0313020

**\*\* Disable Timeout between Decodes**



0313030

**Enable Timeout between Decodes**

The following parameter sets the timeout between decodes for same barcode. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,500ms.

To learn how to program this parameter, see **Appendix 5**.



0313010

**Timeout between Decodes (Same Barcode)**



0006000

**\*\* Exit Setup**



0006010

Enter Setup

---

## Sensitivity

Sensitivity specifies the degree of acuteness of the scanner's response to changes in ambient illumination. The higher the sensitivity, the lower requirement in illumination change to trigger the scanner. You can select an appropriate degree of sensitivity that fits the ambient environment.



0312010

Medium Sensitivity



0312000

Low Sensitivity



0312020

High Sensitivity



0312030

Enhanced Sensitivity

If the above four options fail to meet your needs, you may program the threshold value of illumination change.

Illumination changes that reach or surpass the predefined threshold value will cause the scanner to start a decode session. The lower the threshold value, the greater the sensitivity of the scanner. The default threshold value is 2.

To learn how to program this parameter, see **Appendix 5**.



0312040

Threshold Value of Illumination Change (1-20)

---



0006000

\*\* Exit Setup



0006010

**Enter Setup**

---

## Continuous Mode

If the Continuous mode is enabled, the scanner automatically starts one decode session after another. To suspend/resume barcode reading, simply press the trigger.



0302020

**Continuous Mode**

## Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 1ms increments from 100ms to 3,600,000ms. The default setting is 3,000ms. To learn how to program this parameter, see **Appendix 5**.



0313000

**Decode Session Timeout**

## Timeout between Decodes

This parameter sets the timeout between decode sessions. When a decode session ends, next session will not happen until the timeout between decodes expires. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,000ms. To learn how to program this parameter, see **Appendix 5**.



0313040

**Timeout between Decodes**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

### **Timeout between Decodes (Same Barcode)**

Timeout between Decodes (Same Barcode) can avoid undesired rereading of same barcode in a given period of time.

To enable/disable the Timeout between Decodes (Same Barcode), scan the appropriate barcode below.

**Enable Timeout between Decodes:** Do not allow the scanner to re-read same barcode before the timeout between decodes (same barcode) expires.

**Disable Timeout between Decodes:** Allow the scanner to re-read same barcode.



0313160

**\*\* Disable Timeout between Decodes**



0313170

**Enable Timeout between Decodes**

The following parameter sets the timeout between decodes for same barcode. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,500ms.

To learn how to program this parameter, see **Appendix 5**.



0313010

**Timeout between Decodes (Same Barcode)**



0006000

**\*\* Exit Setup**



0006010  
Enter Setup

## Chapter 4 Scanning Preferences

### Introduction

This chapter contains information as to how to adapt your scanner to various applications with preference setting. For instance, to narrow the field of view of the scanner to make sure it reads only those barcodes intended by the user.

### Decode Area

#### Whole Area Decoding

When this option is enabled, the scanner attempts to decode barcode(s) within its field of view, from the center to the periphery, and transmits the barcode that has been first decoded.



**\*\* Whole Area Decoding**

#### Specific Area Decoding

The scanner attempts to read barcode(s) within a specified decoding area and transmits the barcode that has been first decoded. This option allows the scanner to narrow its field of view to make sure it reads only those barcodes intended by the user. For instance, if multiple barcodes are placed closely together, specific area decoding in conjunction with appropriate pre-defined decoding area will insure that only the desired barcode is read.



**Specific Area Decoding**



0006000  
**\*\* Exit Setup**



0006010  
Enter Setup


---

## Specify Decoding Area

If **Specific Area Decoding** is enabled, the scanner only reads barcodes that intersect the predefined decoding area.

The default decoding area is an area of 40% top, 60% bottom, 40% left and 60% right of the scanner's field of view, as shown in the figure below. In the following example, the white box is the decoding area. Since Barcode 1 passes through the decoding area, it will be read. Barcode 2 does not pass through the decoding area, so it will not be read.

You can define the decoding area using the **Top of Decoding Area**, **Bottom of Decoding Area**, **Left of Decoding Area** and **Right of Decoding Area** barcodes as well as numeric barcode(s) that represent(s) a desired percentage (0-100). To learn how to program decoding area, see **Appendix 5**.

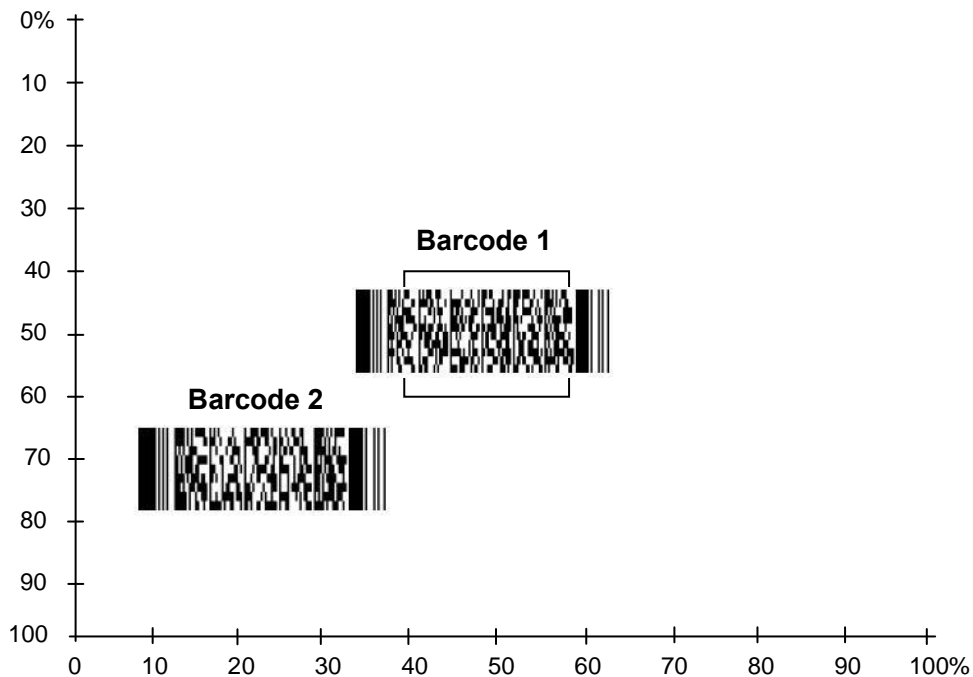

0006000  
\*\* Exit Setup



0006010

**Enter Setup**

---



0322030

**Top of Decoding Area**



0322040

**Bottom of Decoding Area**



0322050

**Left of Decoding Area**



0322060

**Right of Decoding Area**



0006000

**\*\* Exit Setup**



0006010

Enter Setup

## Chapter 5 Illumination & Aiming

### Illumination

A couple of illumination options are provided to improve the lighting conditions during every image capture:

**Normal:** Illumination LEDs are turned on during image capture.

**Always ON:** Illumination LEDs keep ON after the scanner is powered on.

**OFF:** Illumination LEDs are OFF all the time.



0200000

**\*\* Normal**



0200020

**OFF**



0200010

**Always ON**



0006000

**\*\* Exit Setup**





0006010

Enter Setup

---

## Aiming

When scanning/capturing image, the scanner projects an aiming pattern which allows positioning the target barcode within its field of view and thus makes decoding easier.

**Normal:** The scanner projects an aiming pattern only during barcode scanning/capture.

**Always ON:** Aiming pattern is constantly ON after the scanner is powered on.

**OFF:** Aiming pattern is OFF all the time.



0201000

**\*\* Normal**



0201020

**OFF**



0201010

**Always ON**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

## Chapter 6 Beep & LED Notifications

### Startup Beep

If startup beep is enabled, the scanner will beep after being turned on.



0204001

**\*\* Enable Startup Beep**



0204000

**Disable Startup Beep**

### Good Read Beep for Non-programming Barcode

Scan the appropriate barcode below to enable or disable the emission of beep when a non-programming barcode is decoded . Beep type (frequency) and volume are also user programmable.



0203010

**\*\* Good Read Beep On for Non-programming Barcode**



0203000

**Good Read Beep Off for Non-programming Barcode**



0006000

**\*\* Exit Setup**



0006010

Enter Setup

---

## Beep Type



0203020

Type 1



0203022

\*\* Type 3



0203021

Type 2

## Beep Volume



0203030

\*\* Loud



0203032

Low



0203031

Medium



0006000

\*\* Exit Setup



0006010

**Enter Setup**

---

## Beep on Unknown Character

Due to the differences in keyboard layouts, some characters contained in barcode data may be unavailable on the selected keyboard (USB HID-KBW). As a result, the scanner fails to transmit the unknown characters.

Scan the appropriate barcode below to enable or disable the emission of beep when an unknown character is detected.



1103031

**Beep on Unknown Character**



1103030

**\*\* Do Not Beep on Unknown Character**

## Good Read Beep for Programming Barcode



0203041

**\*\* Good Read Beep On for Programming Barcode**



0203040

**Good Read Beep Off for Programming Barcode**

## Good Read LED



0206011

**\*\* Good Read LED ON**



0206010

**Good Read LED OFF**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

---

## Transmit NGR (Not Good Read) Message

Scan a barcode below to select whether or not to transmit a user-defined NGR (Not Good Read) message when a barcode cannot be decoded.



0320010

**Transmit NGR Message**



0320000

**\*\* Do Not Transmit NGR Message**

## Edit NGR Message

To edit an NGR message, scan the **Edit NGR Message** barcode and the numeric barcodes corresponding to the ASCII values (decimal) of desired characters and then scan the **Save** barcode.

An NGR message can contain 0-7 characters (ASCII value of character: 0-255).



0320020

**Edit NGR Message**



0006000

**\*\* Exit Setup**



0006010  
Enter Setup

## Chapter 7 Prefix & Suffix

In many applications, barcode data needs to be edited and distinguished from one another.

Usually AIM ID and Code ID can be used as identifiers, but in some special cases customized prefix and terminating character suffix like Carriage Return or Line Feed can also be the alternatives.

Data editing may include:

- ✧ Append AIM ID/Code ID/custom prefix before the decoded data
- ✧ Append custom suffix after the decoded data
- ✧ Append terminating character to the end of the data

The following formats can be used when editing barcode data:

- ✧ [Code ID] + [Custom Prefix] + [AIM ID] + [DATA] + [Custom Suffix] + [Terminating Character]
- ✧ [Custom Prefix] + [Code ID] + [AIM ID] + [DATA] + [Custom Suffix] + [Terminating Character]

Note: [DATA] must be transmitted while user can decide whether to transmit any of the rest parts.



0006000  
\*\* Exit Setup



0006010  
Enter Setup

---

## Global Settings

### Enable/Disable All Prefixes/Suffixes

- ✧ **Disable All Prefixes/Suffixes:** Transmit barcode data with no prefix/suffix.
- ✧ **Enable All Prefixes/Suffixes:** Allow user to append Code ID prefix, AIM ID prefix, custom prefix/suffix and terminating character to the barcode data before the transmission.



Enable All Prefixes/Suffixes



Disable All Prefixes/Suffixes

## Prefix Sequences



Code ID+Custom Prefix+AIM ID



\*\* Custom Prefix+Code ID+AIM ID



0006000  
\*\* Exit Setup



0006010

Enter Setup

---

## Custom Prefix

### Enable/Disable Custom Prefix

If custom prefix is enabled, you are allowed to append to the data a user-defined prefix that cannot exceed 11 characters.



0305010

Enable Custom Prefix



0305000

\*\* Disable Custom Prefix

### Set Custom Prefix

To set a custom prefix, scan the **Set Custom Prefix** barcode and the numeric barcodes representing the hexadecimal value(s) of a desired prefix and then scan the **Save** barcode. Refer to **Appendix 4: ASCII Table** for hexadecimal values of characters. To view a setting example, see **Appendix 5: Parameter Programming Examples**.

**Note:** A custom prefix cannot exceed 11 characters.



0300000

Set Custom Prefix



0006000

\*\* Exit Setup





0006010

Enter Setup

---

## AIM ID Prefix

AIM (Automatic Identification Manufacturers) IDs and ISO/IEC 15424 standards define symbology identifiers and data carrier identifiers. (For the details, see **Appendix 2: AIM ID Table**. If AIM ID prefix is enabled, the scanner will add the symbology identifier before the scanned data after decoding.



0308030

Enable AIM ID Prefix



0308000

\*\* Disable AIM ID Prefix

## Code ID Prefix

Code ID can also be used to identify barcode type. Unlike AIM ID, Code ID is user programmable. Code ID can only consist of one or two English letters.



0307010

Enable Code ID Prefix



0307000

\*\* Disable Code ID Prefix

## Restore All Default Code IDs

For the information of default Code IDs, see **Appendix 3: Code ID Table**.



0307020

Restore All Default Code IDs

---



0006000

\*\* Exit Setup



0006010

Enter Setup

## Modify Code ID

To change the Code ID of a symbology, scan the appropriate **Modify Code ID** barcode below and the numeric barcodes representing the hexadecimal value of a desired Code ID and then scan the **Save** barcode. Refer to **Appendix 4: ASCII Table** for hexadecimal values of characters. To view a setting example, see **Appendix 5: Parameter Programming Examples**.



0005000

Modify PDF417 Code ID



0005030

Modify Data Matrix Code ID



0005010

Modify QR Code Code ID



0005070

Modify Chinese Sensible Code ID



0004020

Modify Code 128 Code ID



0004030

Modify GS1-128 Code ID



0004210

Modify AIM-128 Code ID



0004040

Modify EAN-8 Code ID



0004050

Modify EAN-13 Code ID



0004060

Modify UPC-E Code ID



0006000

\*\* Exit Setup



0006010

**Enter Setup**

---



0004070

**Modify UPC-A Code ID**



0004240

**Modify ISBN Code ID**



0004230

**Modify ISSN Code ID**



0004130

**Modify Code 39 Code ID**



0004170

**Modify Code 93 Code ID**



0004080

**Modify Interleaved 2 of 5 Code ID**



0004090

**Modify ITF-14 Code ID**



0004100

**Modify ITF-6 Code ID**



0004150

**Modify Codabar Code ID**



0004250

**Modify Industrial 25 Code ID**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

---



0004260

**Modify Standard 25 Code ID**



0004110

**Modify Matrix 25Code ID**



0004220

**Modify COOP 25 Code ID**



0004280

**Modify Code 11**



0004270

**Modify Plessey Code ID**



0004290

**Modify MSI/Plessey Code ID**



0004310

**Modify GS1 Databar Code ID**



0006000

**\*\* Exit Setup**



0006010

Enter Setup

---

## Custom Suffix

### Enable/Disable Custom Suffix

If custom suffix is enabled, you are allowed to append to the data a user-defined suffix that cannot exceed 11 characters.



0306010

Enable Custom Suffix



0306000

\*\* Disable Custom Suffix

### Set Custom Suffix

To set a custom suffix, scan the **Set Custom Suffix** barcode and the numeric barcodes representing the hexadecimal value(s) of a desired prefix and then scan the **Save** barcode. Refer to **Appendix 4: ASCII Table** for hexadecimal values of characters. To view a setting example, see **Appendix 5: Parameter Programming Examples**.

**Note:** A custom prefix cannot exceed 11 characters.



0301000

Set Custom Suffix



0006000

\*\* Exit Setup



0006010

**Enter Setup**

---

## Terminating Character Suffix

A terminating character can be used to mark the end of data, which means nothing can be added after it.

A terminating character suffix can contain 1-7 characters.

### Enable/Disable Terminating Character Suffix

To enable/disable terminating character suffix, scan the appropriate barcode below.



0309010

**\*\* Enable Terminating Character Suffix**



0309000

**Disable Terminating Character Suffix**



0006000

**\*\* Exit Setup**



0006010

Enter Setup

---

## Set Terminating Character Suffix

The scanner provides a shortcut for setting the terminating character suffix to CR (0x0D) or CRLF (0x0D,0x0A) and enabling it by scanning the appropriate barcode below.



0310010

**\*\* Terminating Character CR (0x0D)**



0310020

**Terminating Character CRLF (0x0D,0x0A)**

To set a terminating character suffix, scan the **Set Terminating Character Suffix** barcode and the numeric barcodes representing the hexadecimal value(s) of a desired terminating character and then scan the **Save** barcode. Refer to **Appendix 4: ASCII Table** for hexadecimal values of terminating characters. To view a setting example, see **Appendix 5: Parameter Programming Examples**.

**Note:** A terminating character suffix cannot exceed 7 characters.



0310000

**Set Terminating Character Suffix**



0006000

**\*\* Exit Setup**



0006010  
Enter Setup

## Chapter 8 Symbologies

### Global Settings

#### Enable/Disable All Symbologies

If the **Disable All Symbologies** feature is enabled, the scanner will not be able to read any non-programming barcodes except the programming barcodes.



0001020  
Enable All Symbologies



0001010  
Disable All Symbologies

#### Enable/Disable 1D Symbologies

If the **Disable 1D Symbologies** feature is enabled, the scanner will not be able to read any 1D barcodes.



0001040  
Enable 1D Symbologies



0001030  
Disable 1D Symbologies

#### Enable/Disable 2D Symbologies

If the **Disable 2D Symbologies** feature is enabled, the scanner will not be able to read any 2D barcodes.



0001060  
Enable 2D Symbologies



0001050  
Disable 2D Symbologies



0006000  
\*\* Exit Setup





0006010

Enter Setup

---

## Video Reverse

The **Video Reverse** feature only applies to 2D barcodes.

Regular barcode: Dark image on a bright background.

Inverse barcode: Bright image on a dark background.

The examples of regular barcode and inverse barcode are shown below.



Regular Barcode



Inverse Barcode

Video Reverse allows the scanner to read barcodes that are inverted.

**Video Reverse ON:** Read both regular barcodes and inverse barcodes.

**Video Reverse OFF:** Read regular barcodes only.

The scanner shows a slight decrease in scanning speed when Video Reverse is ON.



0001021

Video Reverse ON



0001011

\*\* Video Reverse OFF



0006000

\*\* Exit Setup



0006010

Enter Setup

## 1D Symbologies

### Code 128

#### Restore Factory Defaults



0400000

Restore the Factory Defaults of Code 128

#### Enable/Disable Code 128



0400020

\*\* Enable Code 128



0400010

Disable Code 128

#### Set Length Range for Code 128



0400030

Set the Minimum Length



0400040

Set the Maximum Length



0006000

\*\* Exit Setup



0006010

**Enter Setup**

---

## **GS1-128 (UCC/EAN-128)**

### **Restore Factory Defaults**



0412000

**Restore the Factory Defaults of GS1-128**

### **Enable/Disable GS1-128**



0412020

**\*\* Enable GS1-128**



0412010

**Disable GS1-128**

### **Set Length Range for GS1-128**



0412030

**Set the Minimum Length**



0412040

**Set the Maximum Length**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

---

## **AIM-128**

### **Restore Factory Defaults**



0423000

**Restore the Factory Defaults of AIM-128**

### **Enable/Disable AIM-128**



0423020

**\*\* Enable AIM-128**



0423010

**Disable AIM-128**

### **Set Length Range for AIM-128**



0423030

**Set the Minimum Length**



0423040

**Set the Maximum Length**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

---

## **EAN-8**

### **Restore Factory Defaults**



0401000

**Restore the Factory Defaults of EAN-8**

### **Enable/Disable EAN-8**



0401020

**\*\* Enable EAN-8**



0401010

**Disable EAN-8**

### **Transmit Check Digit**

EAN-8 is 8 digits in length with the last one as its check digit used to verify the integrity of the data.



0401040

**\*\* Transmit EAN-8 Check Digit**



0401030

**Do Not Transmit EAN-8 Check Digit**



0006000

**\*\* Exit Setup**



0006010  
Enter Setup

### Add-On Code

An EAN-8 barcode can be augmented with a two-digit or five-digit add-on code to form a new one. In the examples below, the part surrounded by blue dotted line is an EAN-8 barcode while the part circled by red dotted line is add-on code.



**Enable 2-Digit Add-On Code**



**\*\* Disable 2-Digit Add-On Code**



**Enable 5-Digit Add-On Code**



**\*\* Disable 5-Digit Add-On Code**

**Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code:** The scanner decodes a mix of EAN-8 barcodes with and without 2-digit/5-digit add-on codes.

**Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code:** The scanner decodes EAN-8 and ignores the add-on code when presented with an EAN-8 plus add-on barcode. It can also decode EAN-8 barcodes without add-on codes.



0006000  
**\*\* Exit Setup**



0006010

Enter Setup

---

### Add-On Code Required

When **EAN-8 Add-On Code Required** is selected, the scanner will only read EAN-8 barcodes that contain add-on codes.



0401110

**EAN-8 Add-On Code Required**



0401120

**\*\* EAN-8 Add-On Code Not Required**

### EAN-8 Extension

**Disable EAN-8 Zero Extend:** Transmit EAN-8 barcodes as is.

**Enable EAN-8 Zero Extend:** Add five leading zeros to decoded EAN-8 barcodes to extend to 13 digits.



0401100

**Enable EAN-8 Zero Extend**



0401090

**\*\* Disable EAN-8 Zero Extend**



0006000

**\*\* Exit Setup**



0006010

Enter Setup

---

## EAN-13

### Restore Factory Defaults



0402000

Restore the Factory Defaults of EAN-13

### Enable/Disable EAN-13



0402020

\*\* Enable EAN-13



0402010

Disable EAN-13

### Transmit Check Digit



0402040

\*\* Transmit EAN-13 Check Digit



0402030

Do Not Transmit EAN-13 Check Digit



0006000

\*\* Exit Setup





0006010

Enter Setup

### Add-On Code

An EAN-13 barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



0402060

**Enable 2-Digit Add-On Code**



0402050

**\*\* Disable 2-Digit Add-On Code**



0402080

**Enable 5-Digit Add-On Code**



0402070

**\*\* Disable 5-Digit Add-On Code**

**Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code:** The scanner decodes a mix of EAN-13 barcodes with and without 2-digit/5-digit add-on codes.

**Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code:** The scanner decodes EAN-13 and ignores the add-on code when presented with an EAN-13 plus add-on barcode. It can also decode EAN-13 barcodes without add-on codes.

### Add-On Code Required

When **EAN-13 Add-On Code Required** is selected, the scanner will only read EAN-13 barcodes that contain add-on codes.



0402090

**EAN-13 Add-On Code Required**



0402100

**\*\* EAN-13 Add-On Code Not Required**



0006000

**\*\* Exit Setup**



0006010

Enter Setup

---

### EAN-13 Beginning with 290 Add-On Code Required

This setting programs the scanner to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with “290”. The following settings can be programmed:

**Require Add-On Code:** All EAN-13 barcodes that begin with “290” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.

**Do Not Require Add-On Code:** If you have selected **Require Add-On Code**, and you want to disable this feature, scan **Do Not Require Add-On Code**. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.



0402110

**\*\* Do Not Require Add-On Code**



0402120

**Require Add-On Code**

### EAN-13 Beginning with 378/379 Add-On Code Required

This setting programs the scanner to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with a “378” or “379”. The following settings can be programmed:

**Require Add-On Code:** All EAN-13 barcodes that begin with a “378” or “379” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.

**Do Not Require Add-On Code:** If you have selected **Require Add-On Code**, and you want to disable this feature, scan **Do Not Require Add-On Code**. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.



0402130

**\*\* Do Not Require Add-On Code**



0402140

**Require Add-On Code**

---



0006000

**\*\* Exit Setup**



0006010  
Enter Setup

---

### EAN-13 Beginning with 414/419 Add-On Code Required

This setting programs the scanner to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with a “414” or “419”. The following settings can be programmed:

**Require Add-On Code:** All EAN-13 barcodes that begin with a “414” or “419” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.

**Do Not Require Add-On Code:** If you have selected **Require Add-On Code**, and you want to disable this feature, scan **Do Not Require Add-On Code**. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.



**\*\* Do Not Require Add-On Code**



**Require Add-On Code**

### EAN-13 Beginning with 434/439 Add-On Code Required

This setting programs the scanner to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with a “434” or “439”. The following settings can be programmed:

**Require Add-On Code:** All EAN-13 barcodes that begin with a “434” or “439” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.

**Do Not Require Add-On Code:** If you have selected **Require Add-On Code**, and you want to disable this feature, scan **Do Not Require Add-On Code**. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.



**\*\* Do Not Require Add-On Code**



**Require Add-On Code**



0006000  
**\*\* Exit Setup**



0006010

Enter Setup

### EAN-13 Beginning with 977 Add-On Code Required

This setting programs the scanner to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with “977”. The following settings can be programmed:

**Require Add-On Code:** All EAN-13 barcodes that begin with “977” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.

**Do Not Require Add-On Code:** If you have selected **Require Add-On Code**, and you want to disable this feature, scan **Do Not Require Add-On Code**. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.



0402190

**\*\* Do Not Require Add-On Code**



0402200

**Require Add-On Code**

### EAN-13 Beginning with 978 Add-On Code Required

This setting programs the scanner to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with “978”. The following settings can be programmed:

**Require Add-On Code:** All EAN-13 barcodes that begin with “978” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.

**Do Not Require Add-On Code:** If you have selected **Require Add-On Code**, and you want to disable this feature, scan **Do Not Require Add-On Code**. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.



0402210

**\*\* Do Not Require Add-On Code**



0402220

**Require Add-On Code**



0006000

**\*\* Exit Setup**



0006010

Enter Setup

---

### EAN-13 Beginning with 979 Add-On Code Required

This setting programs the scanner to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with “979”. The following settings can be programmed:

**Require Add-On Code:** All EAN-13 barcodes that begin with “979” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.

**Do Not Require Add-On Code:** If you have selected **Require Add-On Code**, and you want to disable this feature, scan **Do Not Require Add-On Code**. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.



0402230

**\*\* Do Not Require Add-On Code**



0402240

**Require Add-On Code**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

---

## ISSN

**Restore Factory Defaults**



0421000

**Restore the Factory Defaults of ISSN**

## Enable/Disable ISSN



0421020

**Enable ISSN**



0421010

**\*\* Disable ISSN**



0006000

**\*\* Exit Setup**



0006010  
Enter Setup

### Add-On Code

An ISSN barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



**Enable 2-Digit Add-On Code**



**\*\* Disable 2-Digit Add-On Code**



**Enable 5-Digit Add-On Code**



**\*\* Disable 5-Digit Add-On Code**

**Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code:** The scanner decodes a mix of ISSN barcodes with and without 2-digit/5-digit add-on codes.

**Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code:** The scanner decodes ISSN and ignores the add-on code when presented with an ISSN plus add-on barcode. It can also decode ISSN barcodes without add-on codes.

### Add-On Code Required

When **ISSN Add-On Code Required** is selected, the scanner will only read ISSN barcodes that contain add-on codes.



**ISSN Add-On Code Required**



**\*\* ISSN Add-On Code Not Required**



0006000  
**\*\* Exit Setup**



0006010

**Enter Setup**

---

## ISBN

**Restore Factory Default**



0416000

**Restore the Factory Defaults of ISBN**

## Enable/Disable ISBN



0416020

**\*\* Enable ISBN**



0416010

**Disable ISBN**

## Set ISBN Format



0416030

**\*\* ISBN-13**



0416040

**ISBN-10**



0006000

**\*\* Exit Setup**





0006010

Enter Setup

---

## Add-On Code

An ISBN barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



0416050

**Enable 2-Digit Add-On Code**



0416060

**\*\* Disable 2-Digit Add-On Code**



0416070

**Enable 5-Digit Add-On Code**



0416080

**\*\* Disable 5-Digit Add-On Code**

**Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code:** The scanner decodes a mix of ISBN barcodes with and without 2-digit/5-digit add-on codes.

**Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code:** The scanner decodes ISBN and ignores the add-on code when presented with an ISBN plus add-on barcode. It can also decode ISBN barcodes without add-on codes.

## Add-On Code Required

When **ISBN Add-On Code Required** is selected, the scanner will only read ISBN barcodes that contain add-on codes.



0416090

**ISBN Add-On Code Required**



0416100

**\*\* ISBN Add-On Code Not Required**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

## **UPC-E**

### **Restore Factory Defaults**



0403000

**Restore the Factory Defaults of UPC-E**

### **Enable/Disable UPC-E**



0403020

**\*\* Enable UPC-E**



0403010

**Disable UPC-E**

### **Transmit Check Digit**



0403040

**\*\* Transmit UPC-E Check Digit**



0403030

**Do Not Transmit UPC-E Check Digit**



0006000

**\*\* Exit Setup**



0006010  
Enter Setup

### Add-On Code

A UPC-E barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



**Enable 2-Digit Add-On Code**



**\*\* Disable 2-Digit Add-On Code**



**Enable 5-Digit Add-On Code**



**\*\* Disable 5-Digit Add-On Code**

**Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code:** The scanner decodes a mix of UPC-E barcodes with and without 2-digit/5-digit add-on codes.

**Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code:** The scanner decodes UPC-E and ignores the add-on code when presented with a UPC-E plus add-on barcode. It can also decode UPC-E barcodes without add-on codes.

### Add-On Code Required

When **UPC-E Add-On Code Required** is selected, the scanner will only read UPC-E barcodes that contain add-on codes.



**UPC-E Add-On Code Required**



**\*\* UPC-E Add-On Code Not Required**



0006000  
**\*\* Exit Setup**



0006010  
**Enter Setup**

### **Transmit System Character “0”**

The first character of UPC-E barcode is the system character “0”.



**\*\* Transmit System Character “0”**



**Do Not Transmit System Character “0”**

### **UPC-E Extension**

**Disable UPC-E Extend:** Transmit UPC-E barcodes as is.

**Enable UPC-E Extend:** Extend UPC-E barcodes to make them compatible in length to UPC-A.



**Enable UPC-E Extend**



**\*\* Disable UPC-E Extend**



0006000  
**\*\* Exit Setup**



0006010

Enter Setup

---

## UPC-A

### Restore Factory Defaults



0404000

Restore the Factory Defaults of UPC-A

### Enable/Disable UPC-A



0404020

\*\* Enable UPC-A



0404010

Disable UPC-A

### Transmit Check Digit



0404040

\*\* Transmit UPC-A Check Digit



0404030

Do Not Transmit UPC-A Check Digit



0006000

\*\* Exit Setup



0006010  
Enter Setup

### Add-On Code

A UPC-A barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



Enable 2-Digit Add-On Code



\*\* Disable 2-Digit Add-On Code



Enable 5-Digit Add-On Code



\*\* Disable 5-Digit Add-On Code

**Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code:** The scanner decodes a mix of UPC-A barcodes with and without 2-digit/5-digit add-on codes.

**Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code:** The scanner decodes UPC-A and ignores the add-on code when presented with a UPC-A plus add-on barcode. It can also decode UPC-A barcodes without add-on codes.

### Add-On Code Required

When **UPC-A Add-On Code Required** is selected, the scanner will only read UPC-A barcodes that contain add-on codes.



UPC-A Add-On Code Required



\*\* UPC-A Add-On Code Not Required



0006000  
\*\* Exit Setup



0006010

Enter Setup

---

### Transmit Preamble Character "0"



0404100

Transmit Preamble Character "0"



0404090

\*\* Do not Transmit Preamble Character "0"

**Note:** The preamble character "0" usually does not appear in printed UPC-A barcodes.



0006000

\*\* Exit Setup



0006010

Enter Setup

## Interleaved 2 of 5

### Restore Factory Defaults



0405000

Restore the Factory Defaults of Interleaved 2 of 5

### Enable/Disable Interleaved 2 of 5



0405020

\*\* Enable Interleaved 2 of 5



0405010

Disable Interleaved 2 of 5

### Set Length Range for Interleaved 2 of 5



0405030

Set the Minimum Length



0405040

Set the Maximum Length



0006000

\*\* Exit Setup





0006010

Enter Setup

---

## Check Digit Verification

A check digit is optional for Interleaved 2 of 5 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

**Disable:** The scanner transmits Interleaved 2 of 5 barcodes as is.

**Do Not Transmit Check Digit After Verification:** The scanner checks the integrity of all Interleaved 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

**Transmit Check Digit After Verification:** The scanner checks the integrity of all Interleaved 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



0405050

**\*\* Disable**



0405060

**Do Not Transmit Check Digit After Verification**



0405070

**Transmit Check Digit After Verification**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

## Febraban

### Disable/Enable Febraban



0405280

**\*\* Disable Febraban**



0405290

**Enable Febraban, Do Not Expand**



0405300

**Enable Febraban, Expand**

### Transmit Delay

This feature is available only when USB HID-KBW is enabled. **Transmit Delay per Character** applies to both Expanded and Unexpanded Febraban while **Transmit Delay per 12 Characters** applies to Expanded Febraban only.



0700160

**\*\* Disable Transmit Delay per Character**



0700161

**Enable Transmit Delay per Character (70ms)**



0700170

**\*\* Disable Transmit Delay per 12 Characters**



0700171

**Enable Transmit Delay per 12 Characters (500ms)**



0006000

**\*\* Exit Setup**



0006010

Enter Setup

---

**Custom Transmit Delay per Character:** This parameter is programmable in 5ms increments from 0ms to 75ms. To set it, scan the **Custom Transmit Delay per Character** barcode and two numeric barcodes that represent a desired value. Single-digit values must have a leading zero. See **Appendix 5** for more information. The default value is 70ms.

**Custom Transmit Delay per 12 Characters:** To set this parameter, scan the **Custom Transmit Delay per 12 Characters** barcode and a numeric barcode (0-7, which represent 0ms, 300ms, 400ms, 500ms, 600ms, 700ms, 800ms and 900ms, respectively). See **Appendix 5** for more information. The default value is 700ms.



0700162

**Custom Transmit Delay per Character**



0700172

**Custom Transmit Delay per 12 Characters**



0006000

\*\* Exit Setup



0006010

**Enter Setup**

---

## **ITF-14**

ITF-14 is a special kind of Interleaved 2 of 5 with a length of 14 characters and the last character as the check digit.



0405260

**Restore the Factory Defaults of ITF-14**



0405080

**Disable ITF-14**



0405090

**\*\* Enable ITF-14 But Do Not Transmit Check Digit**



0405100

**Enable ITF-14 and Transmit Check Digit**

**Note:** It is advisable not to enable ITF-14 and Interleaved 2 of 5 at the same time.



0006000

**\*\* Exit Setup**



0006010

Enter Setup

---

## ITF-6

ITF-6 is a special kind of Interleaved 2 of 5 with a length of 6 characters and the last character as the check digit.



0405270

Restore the Factory Defaults of ITF-6



0405110

\*\* Disable ITF-6



0405120

Enable ITF-6 But Do Not Transmit Check Digit



0405130

Enable ITF-6 and Transmit Check Digit

**Note:** It is advisable not to enable ITF-6 and Interleaved 2 of 5 at the same time.



0006000

\*\* Exit Setup



0006010

Enter Setup

## Matrix 2 of 5

### Restore Factory Defaults



0406000

Restore the Factory Defaults of Matrix 2 of 5

### Enable/Disable Matrix 2 of 5



0406020

Enable Matrix 2 of 5



0406010

\*\* Disable Matrix 2 of 5

### Set Length Range for Matrix 2 of 5



0406030

Set the Minimum Length



0406040

Set the Maximum Length



0006000

\*\* Exit Setup



0006010

**Enter Setup**

---

## Check Digit Verification



0406050

**Disable**



0406060

**\*\* Do Not Transmit Check Digit After Verification**



0406070

**Transmit Check Digit After Verification**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

---

## **Industrial 2 of 5**

### **Restore Factory Defaults**



0417000

**Restore the Factory Defaults of Industrial 2 of 5**

### **Enable/Disable Industrial 2 of 5**



0417020

**\*\* Enable Industrial 2 of 5**



0417010

**Disable Industrial 2 of 5**

### **Set Length Range for Industrial 2 of 5**



0417030

**Set the Minimum Length**



0417040

**Set the Maximum Length**



0006000

**\*\* Exit Setup**





0006010

**Enter Setup**

---

## Check Digit Verification



0417050

**\*\* Disable**



0417070

**Transmit Check Digit After Verification**



0417060

**Do Not Transmit Check Digit After Verification**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

## **Standard 2 of 5 (IATA 2 of 5)**

### **Restore Factory Defaults**



0418000

**Restore the Factory Defaults of Standard 25**

### **Enable/Disable Standard 25**



0418020

**\*\* Enable Standard 25**



0418010

**Disable Standard 25**

### **Set Length Range for Standard 25**



0418030

**Set the Minimum Length**



0418040

**Set the Maximum Length**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

---

## Check Digit Verification



0418050

**\*\* Disable**



0418070

**Transmit Check Digit After Verification**



0418060

**Do Not Transmit Check Digit After Verification**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

## **Code 39**

### **Restore Factory Defaults**



0408000

**Restore the Factory Defaults of Code 39**

### **Enable/Disable Code 39**



0408020

**\*\* Enable Code 39**



0408010

**Disable Code 39**

### **Transmit Start/Stop Character**



0408090

**Transmit Start/Stop Character**



0408080

**\*\* Do Not Transmit Start/Stop Character**



0006000

**\*\* Exit Setup**



0006010

Enter Setup

---

### Set Length Range for Code 39



0408030

Set the Minimum Length



0408040

Set the Maximum Length

### Check Digit Verification



0408050

\*\* Disable



0408070

Transmit Check Digit After Verification



0408060

Do Not Transmit Check Digit After Verification

### Enable/Disable Code 39 Full ASCII

The scanner can be configured to identify all ASCII characters by scanning the appropriate barcode below.



0408110

\*\* Enable Code 39 Full ASCII



0408100

Disable Code 39 Full ASCII

---



0006000

\*\* Exit Setup



0006010  
**Enter Setup**

---

### **Enable/Disable Code 32**

Code 32 is a variant of Code 39 used by the Italian pharmaceutical industry. Scan the appropriate bar code below to enable or disable Code 32. Code 39 must be enabled and Code 39 check digit verification must be disabled for this parameter to function.



**\*\* Disable Code 32**



**Enable Code 32**

### **Code 32 Prefix**

Scan the appropriate bar code below to enable or disable adding the prefix character "A" to all Code 32 barcodes. Code 32 must be enabled for this parameter to function.



**\*\* Disable Code 32 Prefix**



**Enable Code 32 Prefix**



0006000  
**\*\* Exit Setup**



0006010

**Enter Setup**

---

### **Transmit Code 32 Check Digit**

Code 32 must be enabled for this parameter to function.



0408180

**\*\* Do Not Transmit Code 32 Check Digit**



0408190

**Transmit Code 32 Check Digit**

### **Transmit Code 32 Start/Stop Character**

Code 32 must be enabled for this parameter to function.



0408160

**\*\* Do Not Transmit Code 32 Start/Stop Character**



0408170

**Transmit Code 32 Start/Stop Character**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

## **Codabar**

### **Restore Factory Defaults**



0409000

**Restore the Factory Defaults of Codabar**

### **Enable/Disable Codabar**



0409020

**\*\* Enable Codabar**



0409010

**Disable Codabar**

### **Set Length Range for Codabar**



0409030

**Set the Minimum Length**



0409040

**Set the Maximum Length**



0006000

**\*\* Exit Setup**





0006010

**Enter Setup**

---

## Check Digit Verification



0409050

**\*\* Disable**



0409070

**Transmit Check Digit After Verification**



0409060

**Do Not Transmit Check Digit After Verification**

## Transmit Start/Stop Character



0409090

**Transmit Start/Stop Character**



0409080

**\*\* Do Not Transmit Start/Stop Character**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

---

### **Start/Stop Character Format**

You can choose your desired start/stop character format by scanning the appropriate barcode below.



0409100

**\*\* ABCD/ABCD as the Start/Stop Character**



0409110

**ABCD/TN\*E as the Start/Stop Character**



0409120

**\*\* Start/Stop Character in Uppercase**



0409130

**Start/Stop Character in Lowercase**



0006000

**\*\* Exit Setup**



0006010

Enter Setup

---

## Code 93

### Restore Factory Defaults



0410000

Restore the Factory Defaults of Code 93

### Enable/Disable Code 93



0410020

\*\* Enable Code 93



0410010

Disable Code 93

### Set Length Range for Code 93



0410030

Set the Minimum Length



0410040

Set the Maximum Length



0006000

\*\* Exit Setup



0006010

**Enter Setup**

---

## Check Digit Verification



0410050

**Disable**



0410060

**\*\* Do Not Transmit Check Digit After Verification**



0410070

**Transmit Check Digit After Verification**



0006000

**\*\* Exit Setup**



0006010

Enter Setup

---

## GS1-Databar (RSS)

### Restore Factory Defaults



0413000

Restore the Factory Defaults of GS1-Databar

### Enable/Disable GS1 Databar



0413020

\*\* Enable GS1-DataBar



0413010

Disable GS1-DataBar

### Transmit Application Identifier "01"



0413060

\*\* Transmit Application Identifier "01"



0413050

Do Not Transmit Application Identifier "01"



0006000

\*\* Exit Setup



0006010

**Enter Setup**

## Code 11

### Restore Factory Defaults



0415000

**Restore the Factory Defaults of Code 11**

### Enable/Disable Code 11



0415020

**\*\* Enable Code 11**



0415010

**Disable Code 11**

### Set Length Range for Code 11



0415030

**Set the Minimum Length**



0415040

**Set the Maximum Length**



0006000

**\*\* Exit Setup**



0006010

Enter Setup

### Transmit Check Digit



0415120

Transmit Check Digit



0415110

\*\* Do Not Transmit Check Digit

### Check Digit Verification



0415050

Disable



0415060

\*\* One Check Digit, MOD11



0415070

Two Check Digits, MOD11/MOD11



0415080

Two Check Digits, MOD11/MOD9



0415090

One Check Digit, MOD11 (Len<=10)  
Two Check Digits, MOD11/MOD11 (Len>10)



0415100

One Check Digit, MOD11 (Len<=10)  
Two Check Digits, MOD11/MOD9 (Len>10)



0006000

\*\* Exit Setup



0006010

**Enter Setup**

## **Plessey**

### **Restore Factory Defaults**



0419000

**Restore the Factory Defaults of Plessey**

### **Enable/Disable Plessey**



0419020

**\*\* Enable Plessey**



0419010

**Disable Plessey**

### **Set Length Range for Plessey**



0419030

**Set the Minimum Length**



0419040

**Set the Maximum Length**



0006000

**\*\* Exit Setup**





0006010

**Enter Setup**

---

## Check Digit Verification



0419050

**Disable**



0419060

**\*\* Do Not Transmit Check Digit After Verification**



0419070

**Transmit Check Digit After Verification**



0006000

**\*\* Exit Setup**



0006010

**Enter Setup**

---

## **MSI-Plessey**

### **Restore Factory Defaults**



0420000

**Restore the Factory Defaults of MSI-Plessey**

### **Enable/Disable MSI-Plessey**



0420020

**\*\* Enable MSI-Plessey**



0420010

**Disable MSI-Plessey**

### **Set Length Range for MSI-Plessey**



0420030

**Set the Minimum Length**



0420040

**Set the Maximum Length**



0006000

**\*\* Exit Setup**



0006010

Enter Setup

---

### Transmit Check Digit



0420100

Transmit Check Digit



0420090

\*\* Do Not Transmit Check Digit

### Check Digit Verification



0420050

Disable



0420060

\*\* One Check Digit, MOD10



0420070

Two Check Digits, MOD10/MOD10



0420080

Two Check Digits, MOD10/MOD11



0006000

\*\* Exit Setup



0006010

Enter Setup

## 2D Symbologies

### PDF 417

#### Restore Factory Defaults



0501000

Restore the Factory Defaults of PDF 417

#### Enable/Disable PDF 417



0501020

\*\* Enable PDF 417



0501010

Disable PDF 417

#### Set Length Range for PDF 417



0501030

Set the Minimum Length



0501040

Set the Maximum Length



0006000

\*\* Exit Setup



0006010  
**Enter Setup**

---

### PDF 417 Twin Code

PDF417 twin code is 2 PDF417 barcodes paralleled vertically or horizontally. They must both be either regular or inverse barcodes. They must have similar specifications and be placed closely together.

There are 3 options for reading PDF417 twin codes:

**Single PDF417 Only:** Read either PDF417 code.

**Twin PDF417 Only:** Read both PDF417 codes.

**Both Single & Twin:** Read both PDF417 codes. If successful, transmit as twin PDF417 only. Otherwise, try single PDF417 only.



**\*\* Single PDF417 Only**



**Twin PDF417 Only**



**Both Single & Twin**

### Character Encoding



**\*\* Default Character Encoding**



**UTF-8**



0006000  
**\*\* Exit Setup**



0006010

**Enter Setup**

## QR Code

### Restore Factory Defaults



0502000

**Restore the Factory Defaults of QR Code**

### Enable/Disable QR Code



0502020

**\*\* Enable QR Code**



0502010

**Disable QR Code**

### Set Length Range for QR Code



0502030

**Set the Minimum Length**



0502040

**Set the Maximum Length**

### Micro QR



0502110

**\*\* Enable Micro QR**



0502100

**Disable Micro QR**



0006000

**\*\* Exit Setup**



0006010  
**Enter Setup**

---

## QR Twin Code

QR twin code is 2 QR barcodes paralleled vertically or horizontally. They must both be either regular or inverse barcodes. They must have similar specifications and be placed closely together.

There are 3 options for reading QR twin codes:

**Single QR Only:** Read either QR code.

**Twin QR Only:** Read both QR codes.

**Both Single & Twin:** Read both QR codes. If successful, transmit as twin QR only. Otherwise, try single QR only.



**\*\* Single QR Only**



**Twin QR Only**



**Both Single & Twin**

## Character Encoding



**\*\* Default Character Encoding**



**UTF-8**



0006000  
**\*\* Exit Setup**



0006010

**Enter Setup**

---

## Data Matrix

### Restore Factory Defaults



0504000

**Restore the Factory Defaults of Data Matrix**

### Enable/Disable Data Matrix



0504020

**\*\* Enable Data Matrix**



0504010

**Disable Data Matrix**

### Set Length Range for Data Matrix



0504030

**Set the Minimum Length**



0504040

**Set the Maximum Length**



0006000

**\*\* Exit Setup**





0006010

**Enter Setup**

---

## Rectangular Barcode



0504110

**\*\* Enable Rectangular Barcode**



0504100

**Disable Rectangular Barcode**

## Mirror Image



0504331

**\*\* Decode Mirror Images**



0504330

**Do Not Decode Mirror Images**



0006000

**\*\* Exit Setup**



0006010  
Enter Setup

### Data Matrix Twin Code

Data Matrix twin code is 2 Data Matrix barcodes paralleled vertically or horizontally. They must both be either regular or inverse barcodes. They must have similar specifications and be placed closely together.

There are 3 options for reading Data Matrix twin codes:

**Single Data Matrix Only:** Read either Data Matrix code.

**Twin Data Matrix Only:** Read both Data Matrix codes. Transmission order: Data Matrix code on the left (in the upper position) followed by the one on the right (in the lower position).

**Both Single & Twin:** Read both Data Matrix codes. If successful, transmit as twin Data Matrix only. Otherwise, try single Data Matrix only.



**\*\* Single Data Matrix Only**



**Twin Data Matrix Only**



**Both Single & Twin**

### Character Encoding



**\*\* Default Character Encoding**



**UTF-8**



**\*\* Exit Setup**



0006010

**Enter Setup**

---

## Chinese Sensible Code

### Restore Factory Defaults



0508000

**Restore the Factory Defaults of Chinese Sensible Code**

### Enable/Disable Chinese Sensible Code



0508020

**Enable Chinese Sensible Code**



0508010

**\*\* Disable Chinese Sensible Code**

### Set Length Range for Chinese Sensible Code



0508030

**Set the Minimum Length**



0508040

**Set the Maximum Length**



0006000

**\*\* Exit Setup**

## Chapter 9 Image Control

### Image Flipping

You may flip the image captured by the scanner to meet actual need by scanning the appropriate barcode on the next page. The following figures illustrate original image and three flipped images.



Original Image



Image Flipped Horizontally



Image Flipped Vertically



Image Flipped Horizontally and Vertically



0006000

\*\* Exit Setup

---

## Flip



**\*\* Do Not Flip**



**Flip Vertically**



**Flip Horizontally**



**Flip Horizontally and Vertically**

## Flip Vertically



**Flip Vertically**



**Do Not Flip Vertically**

## Flip Horizontally



**Flip Horizontally**



**Do Not Flip Horizontally**



**\*\* Exit Setup**

# Chapter 10 Data Formatter

## Introduction

You may use the Data Formatter to modify the scanner's output. For example, you can use the Data Formatter to insert characters at certain points in barcode data or to suppress/ replace/ send certain characters in barcode data as it is scanned.

Normally, when you scan a barcode, it gets outputted automatically; however, when you create a format, you must use a “send” command (see the “**Send Commands**” section in this chapter) within the format programming to output data. The maximum size of formatter commands in a data format is 112 characters. By default, the data formatter is disabled. Enable it when required. If you have changed data format settings, and wish to clear all formats and return to the factory defaults, scan the **Default Data Format** code below.



**\*\* Default Data Format**

## Add a Data Format

Data format is used to edit barcode data only. You can program up to four data formats, i.e. Format\_0, Format\_1, Format\_2 and Format\_3. When you create a data format, you must specify the application scope of your data format (such as barcode type and data length) and include formatter commands. When scanned data does not match your data format requirements, you will hear the non-match error beep (if the non-match error beep is ON).

There are two methods to program a data format: Programming with barcodes and programming with a batch command.



**\*\* Exit Setup**

---

## Programming with Barcodes

The following explains how to program a data format by scanning the specific barcodes. Scanning any irrelevant barcode or failing to follow the setting procedure will result in programming failure. To find the alphanumeric barcodes needed to create a data format, see **Appendix 6: Digit Barcodes**.

**Step 1:** Scan the **Enter Setup** barcode.

**Step 2:** Scan the **Add Data Format** barcode.



**Add Data Format**

**Step 3:** Select data format.

Scan a numeric barcode **0** or **1** or **2** or **3** to set this to Format\_0 or Format\_1 or Format\_2 or Format\_3.

**Step 4:** Select formatter command type.

Specify what type of formatter commands will be used. Scan a numeric barcode “6” to select formatter command type 6. (See the “**Formatter Command Type 6**” section in this chapter for more information)

**Step 5:** Set interface type

Scan **999** for any interface type.

**Step 6:** Set Symbology ID Number

Refer to **Appendix 10: Symbology ID Number** and find the ID number of the symbology to which you want to apply the data format. Scan three numeric barcodes for the symbology ID number. If you wish to create a data format for all symbologies, scan **999**.

**Step 7:** Set barcode data length

Specify what length of data will be acceptable for this symbology. Scan the four numeric barcodes that represent the data length. 9999 is a universal number, indicating all lengths. For example, 32 characters should be entered as 0032.



**\*\* Exit Setup**

---

**Step 8:** Enter formatter command

Refer to the “**Formatter Command Type 6**” section in this chapter. Scan the alphanumeric barcodes that represent the command you need to edit data. For example, when a command is F141, you should scan F141. A command can contain up to 112 characters.

**Step 9:** Scan the **Save** barcode from **Appendix 7: Save/Cancel Barcodes** to save your data format.

**Example:** Program format\_0 using formatter command type 6, Code 128 containing 10 characters applicable, send all characters followed by “A”.

- |   |   |
|---|---|
| 1. Scan the <b>Enter Setup</b> barcode        | Enter the Setup mode                          |
| 2. Scan the <b>Add Data Format</b> barcode    | Add a data format                             |
| 3. Scan the <b>0</b> barcode                  | Select format_0                               |
| 4. Scan the <b>6</b> barcode                  | Select formatter command type 6               |
| 5. Scan the <b>9</b> barcode three times      | All interface types applicable                |
| 6. Scan the barcodes <b>002</b>               | Only Code 128 applicable                      |
| 7. Scan the barcodes <b>0010</b>              | Only a length of 10 characters applicable     |
| 8. Scan the alphanumeric barcodes <b>F141</b> | Send all characters followed by “A” (hex: 41) |
| 9. Scan the <b>Save</b> barcode               | Save the data format                          |



0006000

\*\* Exit Setup



---

## Programming with a Batch Command

A data format can also be created by a batch command sent from the host device.

**Syntax:** “nls0323000” + “=” + Double Quotation Mark (”) + Parameter Value + Double Quotation Mark (”) + “;”

Parameter Value consists of the following elements:

**Data format:** 0~3 (1 character). 0, 1, 2 and 3 represent Format\_0, Format\_1, Format\_2 and Format\_3 respectively.

**Formatter command type:** 6 (1 character).

**Interface type:** 999 (3 characters).

**Symbology ID Number:** The ID number of the symbology to which you want to apply the data format (3 characters). 999 indicates all symbologies.

**Data length:** The length of data that will be acceptable for this symbology (4 characters). 9999 indicates all lengths. For example, 32 characters should be entered as 0032.

**Formatter commands:** The command string used to edit data (max. 112 characters). For more information, see the “**Formatter Command Type 6**” section.

Note: A batch command used to create a data format must conform to the syntax above. Returned value 0x06 indicates success; returned value 0x15 indicates failure.

To streamline the programming process, you may as well generate a batch barcode by inputting the batch command (e.g. **0323000=“069990020010F141”**;) used to create a data format. See the “**Use Batch Barcode**” section in Chapter 11 to learn how to put a batch barcode into use.

**Example 1:** Program format\_0 using formatter command type 6, Code 128 containing 10 characters applicable, send all characters followed by “A”.

Batch command: **nls0323000=“069990020010F141”**;

**Example 2:** Program format\_0 using formatter command type 6, all symbologies, all lengths applicable, send the first 5 characters in barcode, wait for 1s, send the next 6 characters, wait for 1s, then send the rest of the barcode data.

Batch command: **nls0323000=“069999999999F20500EF0200F20600EF0200E900”**;



---

## Enable Data Format

After enabling the Data Formatter, you may select a data format you want to use by scanning the appropriate barcode below.



**\*\* Format\_0**



**Format\_1**



**Format\_2**



**Format\_3**

## Change Data Format for a Single Scan

You can switch between data formats for a single scan. The next barcode is scanned using the data format selected here, then reverts to the format you have selected above. For example, you may have set your scanner to the data format you saved as Format\_3. You can switch to Format\_1 for a single trigger pull by scanning the **Single Scan – Format\_1** barcode below. The next barcode that is scanned uses Format\_1, then reverts back to Format\_3.

Note: This setting will be lost by removing power from the scanner, or turning off/ rebooting the device.



**Single Scan – Format\_0**



**Single Scan – Format\_1**



**Single Scan – Format\_2**



**Single Scan – Format\_3**



**\*\* Exit Setup**

---

## Enable/Disable Data Formatter

When Data Formatter is disabled, the data format you have enabled becomes invalid.



**\*\* Disable Data Formatter**

You may wish to require the data to conform to a data format you have created. The following settings can be applied to your data format:

**Enable Data Formatter, Required, Keep Prefix/Suffix:** Scanned data that meets your data format requirements is modified accordingly and gets outputted along with prefixes and suffixes (if prefix and suffix are enabled). Any data that does not match your data format requirements generates an error beep (if Non-Match Error Beep is turned ON) and the data in that barcode is not transmitted.

**Enable Data Formatter, Required, Drop Prefix/Suffix:** Scanned data that meets your data format requirements is modified accordingly and gets outputted without prefixes and suffixes (even if prefix and suffix are enabled). Any data that does not match your data format requirements generates an error beep (if Non-Match Error Beep is turned ON) and the data in that barcode is not transmitted.

**Enable Data Formatter, Not Required, Keep Prefix/Suffix:** Scanned data that meets your data format requirements is modified accordingly and gets outputted along with prefixes and suffixes (if prefix and suffix are enabled). Barcode data that does not match your data format requirements is transmitted as read along with prefixes and suffixes (if prefix and suffix are enabled).

**Enable Data Formatter, Not Required, Drop Prefix/Suffix:** Scanned data that meets your data format requirements is modified accordingly and gets outputted without prefixes and suffixes (even if prefix and suffix are enabled). Barcode data that does not match your data format requirements is transmitted as read along with prefixes and suffixes (if prefix and suffix are enabled).





0323040

**Enable Data Formatter, Required, Keep Prefix/Suffix**



0323041

**Enable Data Formatter, Required, Drop Prefix/Suffix**



0323042

**Enable Data Formatter, Not Required, Keep Prefix/Suffix**



0323043

**Enable Data Formatter, Not Required, Drop Prefix/Suffix**

## Non-Match Error Beep

If Non-Match Error Beep is turned ON, the scanner generates an error beep when a barcode is encountered that does not match your required data format.



0323060

**\*\* Non-Match Error Beep ON**



0323061

**Non-Match Error Beep OFF**

## Clear Data Format

There are two methods to remove data format from your scanner:

Delete one data format: Scan the **Clear One** barcode, a numeric barcode (0-3) and the **Save** barcode. For example, to delete Format\_2, you should scan the **Clear One** barcode, the **2** barcode and the **Save** barcode.

Delete all data formats: Scan the **Clear All** barcode.



0323011

**Clear All**



0323010

**Clear One**



0006000

**\*\* Exit Setup**

---

## Query Data Formats

You may scan the following barcode to get the information of data format(s) you have created. For instance, if you have added Format\_0 as per the example in the “**Programming with Barcodes**” section in this chapter, then the query result will be **Data Format 0:069990020010F141;**



**Query Data Formats**



0006000

**\*\* Exit Setup**

---

## Formatter Command Type 6

When working with the Data Formatter, a virtual cursor is moved along your input data string. The following commands are used to both move this cursor to different positions, and to select, replace, and insert data into the final output. For the hex value of ASCII characters involved in the commands, refer to **Appendix 4: ASCII Table**.

### Send Commands

#### F1 Send all characters

Syntax=F1xx (xx: The insert character's hex value)

Include in the output message all of the characters from the input message, starting from current cursor position, followed by an insert character.

#### F2 Send a number of characters

Syntax=F2nxx (nn: The numeric value (00-99) for the number of characters; xx: The insert character's hex value)

Include in the output message a number of characters followed by an insert character. Start from the current cursor position and continue for "nn" characters or through the last character in the input message, followed by character "xx."

#### F2 Example: Send a number of characters



Send the first 10 characters from the barcode above, followed by a carriage return.

Command string: **F2100D**

F2 is the "Send a number of characters" command

10 is the number of characters to send

0D is the hex value for a CR

The data is output as: **1234567890**

**<CR>**



**\*\* Exit Setup**

---

### F3 Send all characters up to a particular character

Syntax=F3ssxx (ss: The particular character's hex value; xx: The insert character's hex value)

Include in the output message all characters from the input message, starting with the character at the current cursor position and continuing to, but not including, the particular character "ss," followed by character "xx." The cursor is moved forward to the "ss" character.

#### F3 Example: Send all characters up to a particular character



Using the barcode above, send all characters up to but not including "D," followed by a carriage return.

Command string: **F3440D**

F3 is the "Send all characters up to a particular character" command

44 is the hex value for a "D"

0D is the hex value for a CR

The data is output as: **1234567890ABC**

**<CR>**

### E9 Send all but the last characters

Syntax=E9nn (nn: The numeric value (00-99) for the number of characters that will not be sent at the end of the message)

Include in the output message all but the last "nn" characters, starting from the current cursor position. The cursor is moved forward to one position past the last input message character included.

### F4 Insert a character multiple times

Syntax=F4xxnn (xx: The insert character's hex value; nn: The numeric value (00-99) for the number of times it should be sent)

Send "xx" character "nn" times in the output message, leaving the cursor in the current position.



---

**E9 and F4 Example: Send all but the last characters, followed by 2 tabs**



Send all characters except for the last 8 from the barcode above, followed by 2 tabs.

Command string: **E908F40902**

E9 is the “Send all but the last characters” command

08 is the number of characters at the end to ignore

F4 is the “Insert a character multiple times” command

09 is the hex value for a horizontal tab

02 is the number of times the tab character is sent

The data is output as: **1234567890AB<tab><tab>**

**B3 Insert symbology name**

Insert the name of the barcode’s symbology in the output message, without moving the cursor.

**B4 Insert barcode length**

Insert the barcode’s length in the output message, without moving the cursor. The length is expressed as a numeric string and does not include leading zeros.





---

### B3 and B4 Example: Insert the symbology name and length



Send the symbology name and length before the barcode data from the barcode above. Break up these insertions with spaces. End with a carriage return.

Command string: **B3F42001B4F42001F10D**

B3 is the “Insert symbology name” command

F4 is the “Insert a character multiple times” command

20 is the hex value for a space

01 is the number of time the space character is sent

B4 is the “Insert barcode length” command

F4 is the “Insert a character multiple times” command

20 is the hex value for a space

01 is the number of time the space character is sent

F1 is the “Send all characters” command

0D is the hex value for a CR

The data is output as: **Code128 20 1234567890ABCDEFGHIJ**  
**<CR>**

### Move Commands

#### F5 Move the cursor forward a number of characters

Syntax=F5nn (nn: The numeric value (00-99) for the number of characters the cursor should be moved ahead)

Move the cursor ahead “nn” characters from current cursor position.



---

**F5 Example: Move the cursor forward and send the data**



Move the cursor forward 3 characters, then send the rest of the barcode data from the barcode above. End with a carriage return.

Command string: **F503F10D**

F5 is the “Move the cursor forward a number of characters” command

03 is the number of characters to move the cursor

F1 is the “Send all characters” command

0D is the hex value for a CR

The data is output as: **4567890ABCDEFGHIJ**  
**<CR>**

**F6 Move the cursor backward a number of characters**

Syntax=F6nn (nn: The numeric value (00-99) for the number of characters the cursor should be moved back)

Move the cursor back “nn” characters from current cursor position.

**F7 Move the cursor to the beginning**

Syntax=F7

Move the cursor to the first character in the input message.

**EA Move the cursor to the end**

Syntax=EA

Move the cursor to the last character in the input message.



---

## Search Commands

### F8 Search forward for a character

Syntax=F8xx (xx: The search character's hex value)

Search the input message forward for "xx" character from the current cursor position, leaving the cursor pointing to the "xx" character.

### F8 Example: Send barcode data that starts after a particular character



Search for the letter "D" in barcodes and send all the data that follows, including the "D". Using the barcode above:

Command string: **F844F10D**

F8 is the "Search forward for a character" command

44 is the hex value for "D"

F1 is the "Send all characters" command

0D is the hex value for a CR

The data is output as: **DEFGHIJ**

**<CR>**

### F9 Search backward for a character

Syntax=F9xx (xx: The search character's hex value)

Search the input message backward for "xx" character from the current cursor position, leaving the cursor pointing to the "xx" character.



---

### **B0 Search forward for a string**

Syntax=B0nnnnS (nnnn: The string length (up to 9999); S: The ASCII hex value of each character in the string)

Search forward for “S” string from the current cursor position, leaving cursor pointing to “S” string. For example, B0000454657374 will search forward for the first occurrence of the 4-character string “Test.”

### **B0 Example: Send barcode data that starts after a string of characters**



Search for the letters “FGH” in barcodes and send all the data that follows, including “FGH.” Using the barcode above:

Command string: **B00003464748F10D**

B0 is the “Search forward for a string” command

0003 is the string length (3 characters)

46 is the hex value for “F”

47 is the hex value for “G”

48 is the hex value for “H”

F1 is the “Send all characters” command

0D is the hex value for a CR

The data is output as: **FGHIJ**

**<CR>**

### **B1 Search backward for a string**

Syntax=B1nnnnS (nnnn: The string length (up to 9999); S: The ASCII hex value of each character in the string)

Search backward for “S” string from the current cursor position, leaving cursor pointing to “S” string. For example, B1000454657374 will search backward for the first occurrence of the 4-character string “Test.”



---

## E6 Search forward for a non-matching character

Syntax=E6xx (xx: The search character's hex value)

Search the input message forward for the first non-“xx” character from the current cursor position, leaving the cursor pointing to the non-“xx” character.

### E6 Example: Remove zeros at the beginning of barcode data



This example shows a barcode that has been zero filled. You may want to ignore the zeros and send all the data that follows. E6 searches forward for the first character that is not zero, then sends all the data after, followed by a carriage return. Using the barcode above:

Command string: **E630F10D**

E6 is the “Search forward for a non-matching character” command

30 is the hex value for 0

F1 is the “Send all characters” command

0D is the hex value for a CR

The data is output as: **37692**

**<CR>**

## E7 Search backward for a non-matching character

Syntax=E7xx (xx: The search character's hex value)

Search the input message backward for the first non-“xx” character from the current cursor position, leaving the cursor pointing to the non-“xx” character.



---

## Miscellaneous Commands

### FB Suppress characters

Syntax = FBnnxxyy..zz (nn: The numeric value (00-15) for the number of suppressed characters; xxyy..zz: The hex value of the characters to be suppressed)

Suppress all occurrences of up to 15 different characters, starting at the current cursor position, as the cursor is advanced by other commands.

### FB Example: Remove spaces in barcode data



This example shows a barcode that has spaces in the data. You may want to remove the spaces before sending the data. Using the barcode above:

Command string: **FB0120F10D**

FB is the “Suppress characters” command

01 is the number of the characters to be suppressed

20 is the hex value for a space

F1 is the “Send all characters” command

0D is the hex value for a CR

The data is output as: **34567890**

**<CR>**



---

## E4 Replace characters

Syntax = E4nnxx<sub>1</sub>xx<sub>2</sub>yy<sub>1</sub>yy<sub>2</sub>...zz<sub>1</sub>zz<sub>2</sub> (nn: The total count of the number of characters (characters to be replaced plus replacement characters; xx<sub>1</sub>: The characters to be replaced, xx<sub>2</sub>: The replacement characters, continuing through zz<sub>1</sub> and zz<sub>2</sub>)

Replace up to 15 characters in the output message, without moving the cursor.

### E4 Example: Replace zeros with CRs in barcode data



If the barcode has characters that the host application does not want included, you can use the E4 command to replace those characters with something else. In this example, you will replace the zeros in the barcode above with carriage returns.

Command string: **E402300DF10D**

E4 is the "Replace characters" command

02 is the total count of characters to be replaced, plus the replacement characters (0 is replaced by CR, so total characters=2)

30 is the hex value for 0

0D is the hex value for a CR (the character that will replace the 0)

F1 is the "Send all characters" command

0D is the hex value for a CR

The data is output as: **1234**

**5678**

**ABC**

**<CR>**



---

## BA Replace a string with another

Syntax = BAnnNN<sub>1</sub>SS<sub>1</sub>NN<sub>2</sub>SS<sub>2</sub>

nn: The count of replacements to be made, if nn=00 or nn>=the number of occurrences of a string to be replaced, then replace all occurrences of that string.

NN<sub>1</sub>: The length of the string to be replaced, NN<sub>1</sub>>0.

SS<sub>1</sub>: The ASCII hex value of each character in the string to be replaced.

NN<sub>2</sub>: The length of replacement string, NN<sub>2</sub>>=0. To replace string "SS<sub>1</sub>" with NUL (i.e. delete string "SS<sub>1</sub>"), you should set NN<sub>2</sub> to 00 and leave out SS<sub>2</sub>.

SS<sub>2</sub>: The ASCII hex value of each character in the replacement string

From the current cursor position, search forward for the occurrence of "SS<sub>1</sub>" string (of length "NN<sub>1</sub>") and replace the string with "SS<sub>2</sub>" string (of length "NN<sub>2</sub>") in the output message until every "SS<sub>1</sub>" string is replaced or the count of replacements made reaches "nn" times, without moving the cursor.

### BA Example: Replace "23"s with "ABC"s in barcode data



cd123abc23bc12ab232

If the barcode has a string of characters that the host application does not want included, you can use the BA command to replace the string with something else. In this example, you will replace the "23"s in the barcode above with "ABC"s.

Command string: **BA0002323303414243F100**

BA is the "Replace a string with another" command

00 is the count of replacements to be made, 00 means to replace all occurrences of that string

02 is the length of the string to be replaced



\*\* Exit Setup



---

32 is the hex value for 2 (character in the string to be replaced)

33 is the hex value for 3 (character in the string to be replaced)

03 is the length of the replacement string

41 is the hex value for A (character in the replacement string)

42 is the hex value for B (character in the replacement string)

43 is the hex value for C (character in the replacement string)

F1 is the "Send all characters" command

00 is the hex value for a NUL

The data is output as: **cd1ABCabcABCbc12abABC2**

#### **BA Example: Remove only the first occurrence of "23"s in barcode data**

If the barcode has a string of characters that the host application wants removed, you can use the BA command to replace the string with NUL. In this example, you will remove the first occurrence of "23" in the barcode above.

Command string: **BA0102323300F100**

BA is the "Replace a string with another" command

01 is the count of replacements to be made

02 is the length of the string to be replaced

32 is the hex value for 2 (character in the string to be replaced)

33 is the hex value for 3 (character in the string to be replaced)

00 is the length of the replacement string, 00 means to replace the string to be replaced with NUL

F1 is the "Send all characters" command

00 is the hex value for a NUL

The data is output as: **cd1abc23bc12ab232**



---

## EF Insert a delay

Syntax=EFnnnn (nnnn: The delay in 5ms increments, up to 9999)

Inserts a delay of up to 49,995 milliseconds (in multiples of 5), starting from the current cursor position. This command can only be used with USB HID-KBW.

### EF Example: Insert a delay of 1s in between the 5<sup>th</sup> and 6<sup>th</sup> character

Send the first 5 characters in a barcode, wait for 1s, then send the rest of the barcode data.

Command string: **F20500EF0200E900**

F2 is the “Send a number of characters” command

05 is the number of characters to send

00 is the hex value for a Null character

EF is the “Insert a delay” command

0200 is the delay value (5msX200=1000ms=1s)

E9 is the “Send all but the last characters” command

00 is the number of characters that will not be sent at the end of the message



# Chapter 11 Batch Programming

## Introduction

Batch programming enables users to integrate a batch of commands into a single batch barcode.

Listed below are batch programming rules:

1. Command format: Command + "=" + Parameter Value.
2. Each command is terminated by a semicolon (;). Note that there is no space between a command and its terminator semicolon.
3. Use the barcode generator software to generate a 2D batch barcode.

Example: Create a batch barcode for **Illumination Always On** (0200010), **Sense Mode** (0302010), **Decode Session Timeout** (0313000) = 2s:

1. Input the commands:

0200010;0302010;0313000=2000;

2. Generate a batch barcode.

When setting up a scanner with the above configuration, scan the **Enable Batch Barcode** barcode and then the batch barcode generated.



**Enable Batch Barcode**



**\*\* Exit Setup**

---

## Create a Batch Command

A batch command may contain a number of individual commands each of which is terminated by a semicolon (;).

Command Structure: Command (+ "=" + Parameter Value)

4 command syntaxes are described as below:

### 1. Syntax 1: Command

This syntax applies to most configuration situations.

**Example:**

Set the Baud Rate to 38400bps: **0100060**

Enable the Sense Mode: **0302010**

### 2. Syntax 2: Command + "=" + Decimal Digit(s)

This syntax applies to the options/features programming which requires the entry of parameter value (decimal), such as the Maximum/Minimum Length, Decode Session Timeout, Timeout between Decodes (Same Barcode) and Sensitivity.

**Example:**

Set the Decode Session Timeout to 3000ms: **0313000=3000**

Set the Sensitivity to (level) 10: **0312040=10**

### 3. Syntax 3: Command + "=" + Hexadecimal Digit(s) (e.g., 0x101A, 0x2C03)

This syntax applies to the features/options programming like the Custom Prefix/Suffix, Terminating Character Suffix, Code ID Suffix, which requires the entry of parameter value (hexadecimal).

**Example:**

Set the Terminating Character Suffix to CR/LF: **0310000=0x0D0A**

### 4. Syntax 4: Command + "=" + Double Quotation Marks

For situations where the parameter value is visible character in Syntax 3, this syntax is also appropriate.

**Example:**

Set the Custom Prefix to AUTO-ID: **0300000="AUTO-ID"**



---

## Create a Batch Barcode

Batch barcodes can be produced in the format of PDF417, QR Code or Data Matrix.

Example: Create a batch barcode for **Illumination Always On, Sense Mode, Decode Session Timeout = 2s**:

1. Input the following commands:

```
0200010;0302010;0313000=2000;
```

2. Generate a QR batch barcode.



0006000

**\*\* Exit Setup**

---

## Use Batch Barcode

To put a batch barcode into use, scan the following barcodes. (Use the example above.)



**Enter Setup**



**Enable Batch Barcode**



**Batch Barcode**



**Exit Setup**



**\*\* Exit Setup**

## Chapter 12 Troubleshooting

### FAQ

**Problem: Some barcodes cannot be read.**

**Solution:**

1. Find out the barcode type and verify that the barcode type is enabled. If the barcode parameters include check digit verification, select the Disable option.
2. If you do not know the barcode type, enable all symbologies.
3. If they are inverse barcodes (bright images on a dark background), enable the Video Reverse feature.

**Problem: Incorrect output.**

**Solution:**

1. If this problem happens to all barcodes and additional characters appear before/after barcode data, disable all prefix/suffix.
2. If this problem only happens to some barcodes and matches one of the following situations:
  - a) incomplete barcode data: Enable the check digit verification.
  - b) both the first and last characters are asterisks (\*): Disable the transmission of start/stop characters of Code 39.
  - c) "a" transmitted as "+A": Enable Code 39 Full ASCII.

**Problem: Barcodes can be read, but cannot be displayed.**

**Solution:** Verify that the serial port parameter (such as baud rate, data bit and stop bit) settings match the host requirements.

---

**Problem: Illumination and aiming beams are OFF.**

**Solution:**

1. Verify that the scanner is properly powered up.
2. Send “?” to the scanner. If the scanner returns a reply of “!”, then send programming commands to turn on illumination and aimer.

**Problem: Carriage Return/Line Feed settings.**

**Solution:** See the “**Terminating Character Suffix**” section in Chapter 7.



# Appendix

## Appendix 1: Factory Defaults Table

Parameter		Factory Default	Remark
<b>Programming Barcode</b>			
Barcode Programming		Disabled	
Programming Barcode Data		Do not send	
<b>Communication Settings</b>			
RS-232	Baud Rate	9600	
	Parity Check	None	
	Data Bits	8	
	Stop Bits	1	
	Hardware Flow Control	No flow control	
HID-KBW	Polling Rate	1ms	
	USB Country Keyboard Type	U.S.	
	Convert Case	No conversion	
	Inter-Keystroke Delay	0ms	
	Beep on Unknown Character	Do not beep	
	Emulate ALT + Keypad	Disabled	
	Function Key Mapping	Disabled	
	Emulate Numeric Keypad	Disabled	
Code Page	Windows 1252 (Latin I)		
PS/2	External Keyboard	Connected	
<b>Scan Mode</b>			
Default Scan Mode		Manual mode	

Parameter		Factory Default	Remark
Manual Mode	Decode Session Timeout	3,000ms	Applicable to a Manual mode, Sense mode, Continuous mode. 100~3,600,000ms
	Trigger Condition	Level trigger	
	Auto Sleep	Disabled	
	Time Period from Idle to Sleep	500ms	0~65,535ms
	Timeout between Decodes (Same Barcode)	Disabled 1,500ms	0~65,535ms
Sense Mode	Decode Session Timeout	3,000ms	Applicable to Manual mode, Sense mode, Continuous mode. 100~3,600,000ms
	Image Stabilization Timeout	500ms	0~1,600ms
	Timeout between Decodes	1000ms	Applicable to Sense mode, Continuous mode. 0~65,535ms
	Timeout between Decodes (Same Barcode)	Disabled 1,500ms	Applicable to Sense mode, Continuous mode. 0~65,535ms
	Threshold Value of Illumination Change	2	1~20
Continuous Mode	Decode Session Timeout	3,000ms	Applicable to Manual mode, Sense mode, Continuous mode. 100~3,600,000ms
	Timeout between Decodes	1000ms	Applicable to Sense mode, Continuous mode. 0~65,535ms
	Timeout between Decodes (Same Barcode)	Disabled 1,500ms	0~65,535ms

Parameter	Factory Default	Remark
<b>Scanning Preferences</b>		
Decode Area	Whole Area Decoding	
Specify Decoding Area	40% top, 60% bottom, 40% left, 60% right	
<b>Illumination &amp; Aiming</b>		
Illumination	Normal	
Aiming	Normal	
<b>Beep &amp; LED Notifications</b>		
Startup Beep	Enabled	
Good Read Beep for	Notification	Enabled
Non-Programming	Beep Type	Type 3
Barcode	Beep Volume	Loud
Good Read Beep for Programming Barcode	Enabled	
Good Read LED	Enabled	
NGR (Not Good Read) Message	Do not transmit	
	None	
<b>Prefix &amp; Suffix</b>		
Prefix Sequence	Custom Prefix+Code ID+AIM ID	
Custom Prefix	Disabled	
	None	
AIM ID Prefix	Disabled	
Code ID Prefix	Disabled	
Custom Suffix	Disabled	
	None	
Terminating Character Suffix	Enabled	
	0x0D	Carriage Return
<b>Image Control</b>		
Image Flipping	Do not flip	
<b>Data Formatter</b>		
Data Formatter	Disabled	
Enable Data Format	Format_0	
Non-Match Error Beep	On	

Parameter	Factory Default	Remark
<b>Symbologies</b>		
Video Reverse	Disabled	Applicable to all symbologies.
<b>Code 128</b>		
Code 128	Enabled	
Maximum Length	127	
Minimum Length	1	
<b>GS1-128 (UCC/EAN-128)</b>		
GS1-128	Enabled	
Maximum Length	127	
Minimum Length	1	
<b>AIM-128</b>		
AIM-128	Enabled	
Maximum Length	127	
Minimum Length	1	
<b>EAN-8</b>		
EAN-8	Enabled	
Check Digit	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
Extend to EAN-13	Disabled	

Parameter	Factory Default	Remark
<b>EAN-13</b>		
EAN-13	Enabled	
Check Digit	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
EAN-13 Beginning with 290 Add-On Code Required	Do Not Require Add-On Code	
EAN-13 Beginning with 378/379 Add-On Code Required	Do Not Require Add-On Code	
EAN-13 Beginning with 414/419 Add-On Code Required	Do Not Require Add-On Code	
EAN-13 Beginning with 434/439 Add-On Code Required	Do Not Require Add-On Code	
EAN-13 Beginning with 977 Add-On Code Required	Do Not Require Add-On Code	
EAN-13 Beginning with 978 Add-On Code Required	Do Not Require Add-On Code	
EAN-13 Beginning with 979 Add-On Code Required	Do Not Require Add-On Code	
<b>ISSN</b>		
ISSN	Disabled	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
<b>ISBN</b>		
ISBN	Enabled	
ISBN Format	ISBN-13	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	

Parameter	Factory Default	Remark
<b>UPC-E</b>		
UPC-E	Enabled	
Check Digit	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
Extend to UPC-A	Disabled	
System Character "0"	Transmit	
<b>UPC-A</b>		
UPC-A	Enabled	
Check Digit	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
Preamble Character "0"	Do not transmit	
<b>Interleaved 2 of 5</b>		
Interleaved 2 of 5	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Maximum Length	100	
Minimum Length	6	
<b>Febraban</b>		
Febraban	Disabled	
Transmit Delay per Character	Disabled	
	70ms	
Transmit Delay per 12 Characters	Disabled	
	500ms	
<b>ITF-6</b>		
ITF-6	Disabled	
Check Digit	Do not transmit	

Parameter	Factory Default	Remark
<b>ITF-14</b>		
ITF-14	Enabled	
Check Digit	Do not transmit	
<b>Matrix 2 of 5</b>		
Matrix 2 of 5	Disabled	
Check Digit Verification	Enabled	
Check Digit	Do not transmit	
Maximum Length	127	
Minimum Length	6	
<b>Industrial 2 of 5</b>		
Industrial 2 of 5	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Maximum Length	127	
Minimum Length	6	
<b>Standard 2 of 5</b>		
Standard 2 of 5	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Maximum Length	127	
Minimum Length	6	
<b>Code 39</b>		
Code 39	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Start/Stop Character	Do not transmit	
Code 39 Full ASCII	Enabled	
Code 32	Disabled	
Code 32 Prefix	Disabled	
Code 32 Check Digit	Do not transmit	
Code 32 Start/Stop Character	Do not transmit	
Maximum Length	127	
Minimum Length	2	

Parameter	Factory Default	Remark
<b>Codabar</b>		
Codabar	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Start/Stop Character	Do not transmit	
Start/Stop Character Format	ABCD/ABCD Uppercase	
Maximum Length	127	
Minimum Length	2	
<b>Code 93</b>		
Code 93	Enabled	
Check Digit Verification	Enabled	
Check Digit	Do not transmit	
Maximum Length	127	
Minimum Length	3	
<b>GS1 Databar</b>		
GS1 Databar	Enabled	
Application Identifier "01"	Transmit	
<b>Code 11</b>		
Code 11	Enabled	
Check Digit Verification	One check digit,	
Check Digit	Do not transmit	
Maximum Length	127	
Minimum Length	2	
<b>Plessey</b>		
Plessey	Enabled	
Check Digit Verification	Enabled	
Check Digit	Do not transmit	
Maximum Length	127	
Minimum Length	1	



Parameter	Factory Default	Remark
<b>MSI-Plessey</b>		
MSI-Plessey	Enabled	
Check Digit Verification	One check digit, MOD10	
Check Digit	Do not transmit	
Maximum Length	127	
Minimum Length	2	
<b>PDF 417</b>		
PDF 417	Enabled	
Maximum Length	2710	
Minimum Length	1	
PDF 417 Twin Code	Read single PDF417 only	
Character Encoding	Default Character Encoding	
<b>QR Code</b>		
QR Code	Enabled	
Micro QR	Enabled	
Maximum Length	7089	
Minimum Length	1	
QR Twin Code	Read single QR only	
Character Encoding	Default Character Encoding	
<b>Data Matrix</b>		
Data Matrix	Enabled	
Rectangular Barcode	Enabled	
Mirror Image	Decode	
Maximum Length	3116	
Minimum Length	1	
DM Twin Code	Read single DM only	
Character Encoding	Default Character Encoding	
<b>Chinese Sensible Code</b>		
Chinese Sensible Code	Disabled	
Maximum Length	7827	
Minimum Length	1	

## Appendix 2: AIM ID Table

Symbology	AIM ID	Remark
EAN-13	JE0	Standard EAN-13
	JE3	EAN-13 + 2/5-Digit Add-On Code
EAN-8	JE4	Standard EAN-8
	JE4...JE1...	EAN-8 + 2-Digit Add-On Code
	JE4...JE2...	EAN-8 + 5-Digit Add-On Code
UPC-E	JE0	Standard UPC-E
	JE3	UPC-E + 2/5-Digit Add-On Code
UPC-A	JE0	Standard UPC-A
	JE3	UPC-A + 2/5-Digit Add-On Code
Code 128	JC0	Standard Code 128
GS1-128 (UCC/EAN-128)	JC1	FNC1 is the character right after the start character
AIM-128	JC2	FNC1 is the 2nd character after the start character
ISBT-128	JC4	
Interleaved 2 of 5 Febraban	Jl0	No check digit verification
	Jl1	Transmit check digit after verification
	Jl3	Do not transmit check digit after verification
ITF-6	Jl1	Transmit check digit
	Jl3	Do not transmit check digit
ITF-14	Jl1	Transmit check digit
	Jl3	Do not transmit check digit
Industrial 2 of 5	JS0	Not specified
Standard 2 of 5	JR0	No check digit verification
	JR8	MOD10; do not transmit check digit
	JR9	MOD10; transmit check digit
Code 39 Code 32	JA0	Transmit barcodes as is; Full ASCII disabled; no check digit verification
	JA1	MOD43; transmit check digit
	JA3	MOD43; do not transmit check digit
	JA4	Full ASCII enabled; no check digit verification
	JA5	Full ASCII enabled; transmit check digit
	JA7	Full ASCII enabled; do not transmit check digit
Codabar	JF0	Standard Codabar
	JF2	Transmit check digit after verification
	JF4	Do not transmit check digit after verification

Symbology	AIM ID	Remark
<b>Code 93</b>	]G0	Standard Code 93
<b>Code 11</b>	]H0	MOD11; transmit check digit
	]H1	MOD11/MOD11; transmit check digit
	]H3	Do not transmit check digit after verification
	]H9	No check digit verification
<b>GS1-DataBar (RSS)</b>	]e0	Standard GS1-DataBar
<b>Plessey</b>	]P0	Standard Plessey
<b>MSI-Plessey</b>	]M0	MOD10; transmit check digit
	]M1	MOD10; do not transmit check digit
	]M7	MOD10/ MOD11; do not transmit check digit
	]M8	MOD10/ MOD11; transmit check digit
	]M9	No check digit verification
<b>Matrix 2 of 5</b>	]X0	Specified by the manufacturer
	]X1	No check digit verification
	]X2	MOD10; transmit check digit
	]X3	MOD11; do not transmit check digit
<b>ISBN</b>	]X4	Standard ISBN
<b>ISSN</b>	]X5	Standard ISSN
<b>PDF417</b>	]L0	Comply with 1994 PDF417 specifications
<b>Data Matrix</b>	]d0	ECC000 - ECC140
	]d1	ECC200
	]d2	ECC200, FNC1 is the 1st or 5th character after the start character
	]d3	ECC200, FNC1 is the 2nd or 6th character after the start character
	]d4	ECC200, ECI included
	]d5	ECC200, FNC1 is the 1st or 5th character after the start character, ECI included
	]d6	ECC200, FNC1 is the 2nd or 6th character after the start character, ECI included
<b>QR Code</b>	]Q0	QR1
	]Q1	2005 version, ECI excluded
	]Q2	2005 version, ECI included
	]Q3	QR Code 2005, ECI excluded, FNC1 is the 1st character after the start character
	]Q4	QR Code 2005, ECI included, FNC1 is the 1st character after the start character
	]Q5	QR Code 2005, ECI excluded, FNC1 is the 2nd character after the start character
	]Q6	QR Code 2005, ECI included, FNC1 is the 2nd character after the start character
<b>Chinese Sensible Code</b>	]X0	

**Reference:** ISO/IEC 15424:2008 Information technology – Automatic identification and data capture techniques – Data Carrier Identifiers (including Symbology Identifiers).

---

### Appendix 3: Code ID Table

Symbology	Code ID
Code 128	j
GS1-128 (UCC/EAN-128)	j
AIM-128	f
EAN-8	d
EAN-13	d
ISSN	n
ISBN	B
UPC-E	c
UPC-A	c
Interleaved 2 of 5, Febraban	e
ITF-6	e
ITF-14	e
Matrix 2 of 5	v
Industrial 2 of 5	D
Standard 2 of 5	s
Code 39, Code 32	b
Codabar	a
Code 93	i
Code 11	H
Plessey	p
MSI-Plessey	m
GS1 Databar	R
PDF417	r
QR Code	Q
Data Matrix	u
Chinese Sensible Code	h

---

---

## Appendix 4: ASCII Table

Hex	Dec	Char
00	0	NUL (Null char.)
01	1	SOH (Start of Header)
02	2	STX (Start of Text)
03	3	ETX (End of Text)
04	4	EOT (End of Transmission)
05	5	ENQ (Enquiry)
06	6	ACK (Acknowledgment)
07	7	BEL (Bell)
08	8	BS (Backspace)
09	9	HT (Horizontal Tab)
0a	10	LF (Line Feed)
0b	11	VT (Vertical Tab)
0c	12	FF (Form Feed)
0d	13	CR (Carriage Return)
0e	14	SO (Shift Out)
0f	15	SI (Shift In)
10	16	DLE (Data Link Escape)
11	17	DC1 (XON) (Device Control 1)
12	18	DC2 (Device Control 2)
13	19	DC3 (XOFF) (Device Control 3)
14	20	DC4 (Device Control 4)
15	21	NAK (Negative Acknowledgment)
16	22	SYN (Synchronous Idle)
17	23	ETB (End of Trans. Block)
18	24	CAN (Cancel)
19	25	EM (End of Medium)
1a	26	SUB (Substitute)
1b	27	ESC (Escape)
1c	28	FS (File Separator)
1d	29	GS (Group Separator)

---

---

Hex	Dec	Char
1e	30	RS (Request to Send)
1f	31	US (Unit Separator)
20	32	SP (Space)
21	33	! (Exclamation Mark)
22	34	" (Double Quote)
23	35	# (Number Sign)
24	36	\$ (Dollar Sign)
25	37	% (Percent)
26	38	& (Ampersand)
27	39	` (Single Quote)
28	40	( (Left / Opening Parenthesis)
29	41	) (Right / Closing Parenthesis)
2a	42	* (Asterisk)
2b	43	+ (Plus)
2c	44	, (Comma)
2d	45	- (Minus / Dash)
2e	46	. (Dot)
2f	47	/ (Forward Slash)
30	48	0
31	49	1
32	50	2
33	51	3
34	52	4
35	53	5
36	54	6
37	55	7
38	56	8
39	57	9
3a	58	: (Colon)
3b	59	; (Semi-colon)
3c	60	< (Less Than)
3d	61	= (Equal Sign)

---

---

Hex	Dec	Char
3e	62	> (Greater Than)
3f	63	? (Question Mark)
40	64	@ (AT Symbol)
41	65	A
42	66	B
43	67	C
44	68	D
45	69	E
46	70	F
47	71	G
48	72	H
49	73	I
4a	74	J
4b	75	K
4c	76	L
4d	77	M
4e	78	N
4f	79	O
50	80	P
51	81	Q
52	82	R
53	83	S
54	84	T
55	85	U
56	86	V
57	87	W
58	88	X
59	89	Y
5a	90	Z
5b	91	[ (Left / Opening Bracket)
5c	92	\ (Back Slash)
5d	93	] (Right / Closing Bracket)

---

---

Hex	Dec	Char
5e	94	^ (Caret / Circumflex)
5f	95	_ (Underscore)
60	96	' (Grave Accent)
61	97	a
62	98	b
63	99	c
64	100	d
65	101	e
66	102	f
67	103	g
68	104	h
69	105	i
6a	106	j
6b	107	k
6c	108	l
6d	109	m
6e	110	n
6f	111	o
70	112	p
71	113	q
72	114	r
73	115	s
74	116	t
75	117	u
76	118	v
77	119	w
78	120	x
79	121	y
7a	122	z
7b	123	{ (Left/ Opening Brace)
7c	124	(Vertical Bar)
7d	125	} (Right/Closing Brace)
7e	126	~ (Tilde)
7f	127	DEL (Delete)

---



---

## Appendix 5: Parameter Programming Examples

The following examples show you how to program parameters by scanning programming barcodes.

### a. Program the Decode Session Timeout

**Example: Set the decode session timeout to 1500ms**

1. Scan the **Enter Setup** barcode.
2. Scan the **Decode Session Timeout** barcode. (See the “**Decode Session Timeout**” section in Chapter 3)
3. Scan the numeric barcodes “1”, “5”, “0” and “0”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

### b. Program the Time Period from Idle to Sleep

**Example: Set the time period from idle to sleep to 500ms**

1. Scan the **Enter Setup** barcode.
2. Scan the **Time Period from Idle to Sleep** barcode. (See the “**Auto Sleep**” section in Chapter 3)
3. Scan the numeric barcodes “5”, “0” and “0”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

### c. Program the Image Stabilization Timeout

**Example: Set the image stabilization timeout to 500ms**

1. Scan the **Enter Setup** barcode.
  2. Scan the **Image Stabilization Timeout** barcode. (See the “**Image Stabilization Timeout**” section in Chapter 3)
  3. Scan the numeric barcodes “5”, “0” and “0”.
  4. Scan the **Save** barcode.
  5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)
-

---

#### **d. Program the Timeout between Decodes (Same Barcode)**

**Example: Set the timeout between decodes (same barcode) to 1000ms**

1. Scan the **Enter Setup** barcode.
2. Scan the **Timeout between Decodes (Same Barcode)** barcode. (See the “**Timeout between Decodes (Same Barcode)**” section in Chapter 3)
3. Scan the numeric barcodes “1”, “0”, “0” and “0”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

#### **e. Program the Threshold Value of Illumination Change**

**Example: Set the threshold value of illumination change to 4**

1. Scan the **Enter Setup** barcode.
2. Scan the **Threshold Value of Illumination Change** barcode. (See the “**Sensitivity**” section in Chapter 3)
3. Scan the numeric barcode “4”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

#### **f. Program the Timeout between Decodes**

**Example: Set the timeout between decodes to 500ms**

1. Scan the **Enter Setup** barcode.
  2. Scan the **Timeout between Decodes** barcode. (See the “**Timeout between Decodes**” section in Chapter 3)
  3. Scan the numeric barcodes “5”, “0” and “0”.
  4. Scan the **Save** barcode.
  5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)
-

---

## g. Program the Decoding Area

**Example: Set the decoding area to 20% top, 80% bottom, 20% left and 80% right.**

1. Scan the **Enter Setup** barcode.
2. Scan the **Specific Area Decoding** barcode. (See the “**Specific Area Decoding**” section in Chapter 4)
3. Scan the **Top of Decoding Area** barcode. (See the “**Specify Decoding Area**” section in Chapter 4)
4. Scan the numeric barcodes “2” and “0”.
5. Scan the **Save** barcode.
6. Scan the **Bottom of Decoding Area** barcode.
7. Scan the numeric barcodes “8” and “0”.
8. Scan the **Save** barcode.
9. Scan the **Left of Decoding Area** barcode.
10. Scan the numeric barcodes “2” and “0”.
11. Scan the **Save** barcode.
12. Scan the **Right of Decoding Area** barcode.
13. Scan the numeric barcodes “8” and “0”.
14. Scan the **Save** barcode.
15. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

## h. Program the Custom Prefix/Suffix

**Example: Set the custom prefix to “CODE”**

1. Check the hex values of “CODE” in the ASCII Table. (“CODE”: 43, 4F, 44, 45)
2. Scan the **Enter Setup** barcode.
3. Scan the **Set Custom Prefix** barcode. (See the “**Set Custom Prefix**” section in Chapter 6)
4. Scan the numeric barcodes “4”, “3”, “4”, “F”, “4”, “4”, “4” and “5”.
5. Scan the **Save** barcode.
6. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

---

## i. Program the Terminating Character Suffix

### Example: Set the terminating character suffix to 0x0D

1. Scan the **Enter Setup** barcode.
2. Scan the **Set Terminating Character Suffix** barcode. (See the “**Set Terminating Character Suffix**” section in Chapter 6)
3. Scan the numeric barcodes “0” and “D”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

---

## j. Program the Code ID

### Example: Set the Code ID of PDF 417 to “p”

1. Check the hex value of “p” in the ASCII Table. (“p”: 70)
2. Scan the **Enter Setup** barcode.
3. Scan the **Modify PDF417 Code ID** barcode. (See the “**Modify Code ID**” section in Chapter 6)
4. Scan the numeric barcodes “7” and “0”.
5. Scan the **Save** barcode.
6. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

## k. Program the NGR Message

### Example: Set the NGR message to “!ERR”

1. Check the hex values of “!ERR” in the ASCII Table. (“!ERR”: 21, 45, 52, 52)
2. Scan the **Enter Setup** barcode.
3. Scan the **Edit NGR Message** barcode. (See the “**Edit NGR Message**” section in Chapter 5)
4. Scan the numeric barcodes “2”, “1”, “4”, “5”, “5”, “2”, “5” and “2”.
5. Scan the **Save** barcode.
6. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

## l. Program the Code Page

### Example: Set the code page to Windows 1251 (Cyrillic)

1. Scan the **Enter Setup** barcode.
  2. Scan the **Set the Code Page** barcode. (See the “**Code Page**” section in Chapter 2)
  3. Scan the numeric barcode “1”.
  4. Scan the **Save** barcode.
  5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)
-

---

### m. Program the Length Range (Maximum/Minimum Lengths) for a Symbology

**Note:** If minimum length is set to be greater than maximum length, the scanner only decodes barcodes with either the minimum or maximum length. If you only want to read barcodes with a specific length, set both minimum and maximum lengths to be that desired length.

**Example: Set the scanner to decode Code 128 barcodes containing between 8 and 12 characters**

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode. (See the “**Set Length Range for Code 128**” section in Chapter 7)
3. Scan the numeric barcode “8”.
4. Scan the **Save** barcode.
5. Scan the **Set the Maximum Length** barcode. (See the “**Set Length Range for Code 128**” section in Chapter 7)
6. Scan the numeric barcodes “1” and “2”.
7. Scan the **Save** barcode.
8. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

### n. Program the Custom Inter-keystroke Delay

**Example: Set the inter-keystroke delay to 5ms**

1. Scan the **Enter Setup** barcode.
2. Scan the **Custom Delay** barcode. (See the “**Inter-Keystroke Delay**” section in Chapter 2)
3. Scan the numeric barcodes “0” and “5”.
4. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

---

**o. Program the scanner to get proper output for Russian encoded with Windows 1251**

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Code Page** barcode from the “**Code Page**” section in Chapter 2.
3. Scan the numeric barcode “1” from Appendix 6.
4. Scan the **Save** barcode from Appendix 7.
5. Scan the appropriate **Default Character Encoding** barcode according to the symbology your application needs from the “**Character Encoding**” section in Chapter 8.
6. Scan the **Mode 3** barcode from the “**Emulate ALT+Keypad**” section in Chapter 2.
7. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

**p. Program the scanner to get proper output for Russian encoded with UTF-8**

1. Scan the **Enter Setup** barcode.
  2. Scan the **Set the Code Page** barcode from the “**Code Page**” section in Chapter 2.
  3. Scan the numeric barcode “1” from Appendix 6.
  4. Scan the **Save** barcode from Appendix 7.
  5. Scan the appropriate **UTF-8** barcode according to the symbology your application needs from the “**Character Encoding**” section in Chapter 8.
  6. Scan the **Mode 3** barcode from the “**Emulate ALT+Keypad**” section in Chapter 2.
  7. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)
-

---

### q. Program the Custom Transmit Delay per Character for Febraban

**Example: Set the transmit delay per character to 5ms**

1. Scan the **Enter Setup** barcode.
2. Scan the **Custom Transmit Delay per Character** barcode. (See the “**Transmit Delay**” section in Chapter 8)
3. Scan the numeric barcodes “0” and “5”.
4. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

### r. Program the Custom Transmit Delay per 12 Characters for Febraban

**Example: Set the transmit delay per 12 characters to 600ms**

1. Scan the **Enter Setup** barcode.
2. Scan the **Custom Transmit Delay per 12 Characters** barcode. (See the “**Transmit Delay**” section in Chapter 8)
3. Scan the numeric barcodes “4”.
4. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)



---

## Appendix 6: Digit Barcodes

0-9



0



5



1



6



2



7



3



8



4



9

---

**A-F**



**A**



**B**



**C**



**D**



**E**



**F**

---

## Appendix 7: Save/Cancel Barcodes

After reading numeric barcode(s), you need to scan the **Save** barcode to save the data. If you scan the wrong digit(s), you can either scan the **Cancel** barcode and then start the configuration all over again, or scan the **Delete the Last Digit** barcode and then the correct digit, or scan the **Delete All Digits** barcode and then the digits you want.

For instance, after reading the **Maximum Length** barcode and numeric barcodes “1”, “2” and “3”, you scan:

- ✧ **Delete the Last Digit:** The last digit “3” will be removed.
- ✧ **Delete All Digits:** All digits “123” will be removed.
- ✧ **Cancel:** The maximum length configuration will be cancelled. And the scanner is still in the setup mode.



0000160

**Save**



0000170

**Delete the Last Digit**



0000180

**Delete All Digits**



0000190

**Cancel**

## Appendix 8: ASCII Function Key Mapping Table

ASCII Function	ASCII Value (HEX)	No Function Key Mapping	Function Key Mapping
NUL (Null char.)	00	Null	Ctrl+2
SOH (Start of Header)	01	Keypad Enter	Ctrl+A
STX (Start of Text)	02	Caps Lock	Ctrl+B
ETX (End of Text)	03	Null	Ctrl+C
EOT (End of Transmission)	04	Null	Ctrl+D
ENQ (Enquiry)	05	Null	Ctrl+E
ACK (Acknowledgment)	06	Null	Ctrl+F
BEL (Bell)	07	Enter	Ctrl+G
BS (Backspace)	08	Left Arrow	Ctrl+H
HT (Horizontal Tab)	09	Horizontal Tab	Ctrl+I
LF (Line Feed)	0A	Down Arrow	Ctrl+J
VT (Vertical Tab)	0B	Vertical Tab	Ctrl+K
FF (Form Feed)	0C	Delete	Ctrl+L
CR (Carriage Return)	0D	Enter	Ctrl+M
SO (Shift Out)	0E	Insert	Ctrl+N
SI (Shift In)	0F	Esc	Ctrl+O
DLE (Data Link Escape)	10	F11	Ctrl+P
DC1 (XON) (Device Control 1)	11	Home	Ctrl+Q
DC2 (Device Control 2)	12	Print Screen	Ctrl+R
DC3 (XOFF) (Device Control 3)	13	Backspace	Ctrl+S
DC4 (Device Control 4)	14	tab+shift	Ctrl+T
NAK (Negative Acknowledgment)	15	F12	Ctrl+U
SYN (Synchronous Idle)	16	F1	Ctrl+V
ETB (End of Trans. Block)	17	F2	Ctrl+W
CAN (Cancel)	18	F3	Ctrl+X
EM (End of Medium)	19	F4	Ctrl+Y
SUB (Substitute)	1A	F5	Ctrl+Z
ESC (Escape)	1B	F6	See the following table
FS (File Separator)	1C	F7	
GS (Group Separator)	1D	F8	
RS (Request to Send)	1E	F9	
US (Unit Separator)	1F	F10	

## ASCII Function Key Mapping Table (Continued)

The function key mappings of the last five characters in the previous table differ from one keyboard layout to another.

Country/ Keyboard Layout	Function Key Mapping				
	1B	1C	1D	1E	1F
United States	Ctrl+[	Ctrl+\	Ctrl+]	Ctrl+6	Ctrl+-
Belgium	Ctrl+[	Ctrl+<	Ctrl+]	Ctrl+6	Ctrl+-
Scandinavia	Ctrl+8	Ctrl+<	Ctrl+9	Ctrl+6	Ctrl+-
France	Ctrl+^	Ctrl+8	Ctrl+\$	Ctrl+6	Ctrl+=
Germany		Ctrl+Ã	Ctrl++	Ctrl+6	Ctrl+-
Italy		Ctrl+\	Ctrl++	Ctrl+6	Ctrl+-
Switzerland		Ctrl+<	Ctrl+.	Ctrl+6	Ctrl+-
United Kingdom	Ctrl+[	Ctrl+ç	Ctrl+]	Ctrl+6	Ctrl+-
Denmark	Ctrl+8	Ctrl+\	Ctrl+9	Ctrl+6	Ctrl+-
Norway	Ctrl+8	Ctrl+\	Ctrl+9	Ctrl+6	Ctrl+-
Spain	Ctrl+[	Ctrl+\	Ctrl+]	Ctrl+6	Ctrl+-

---

## Appendix 9: Code Pages List

Numeric Barcode Needed	Code Page
0	Windows 1252 (Latin I)
1	Windows 1251 (Cyrillic)

---

## Appendix 10: Symbology ID Number

Symbology	ID Number
Code 128	002
UCC/EAN128	003
EAN-8	004
EAN-13	005
UPC-E	006
UPC-A	007
Interleaved 2 of 5, Febraban	008
ITF-14	009
ITF-6	010
Matrix 2 of 5	011
Code 39, Code 32	013
Codabar	015
Code 93	017
AIM-128	020
ISSN	023
ISBN	024
Industrial 25	025
Standard 25	026
Plessey	027
Code11	028
MSI-Plessey	029
GS1 Databar	031
PDF417	032
QR Code	033
Data Matrix	035
Chinese Sensible Code	039



**Newland EMEA**

+31 (0) 345 87 00 33  
info@newland-id.com

**Newland D-A-CH**

+49 (0) 294 298 76758  
info@newland-id.de

**Newland UK**

+44 (0) 1442 212 020  
sales@newland-id.co.uk

**Newland Nordic**

+46 (0) 708 847 767  
nordic@newland-id.com

**Newland Ibérica**

+34 (0) 93 303 74 66  
info@newland-id.es

**Newland France**

+31 (0) 345 87 00 33  
france@newland-id.com

**Newland Middle East**

+31 (0) 345 87 00 33  
middleeast@newland-id.com

**Newland South Africa**

+27 (0) 11 553 8010  
info@newland-id.co.za

**Newland Italy**

+39 (0) 342 056 2227  
italy@newland-id.com

**Newland Russia**

+31 (0) 345 87 00 33  
russia@newland-id.com